
date projectname attn from fax email phone 9/1/2016 Residences At Vinnin Sq Mike Mike

mbergen@joffemillwork.com 6095012824




Formerly Model #: U105S

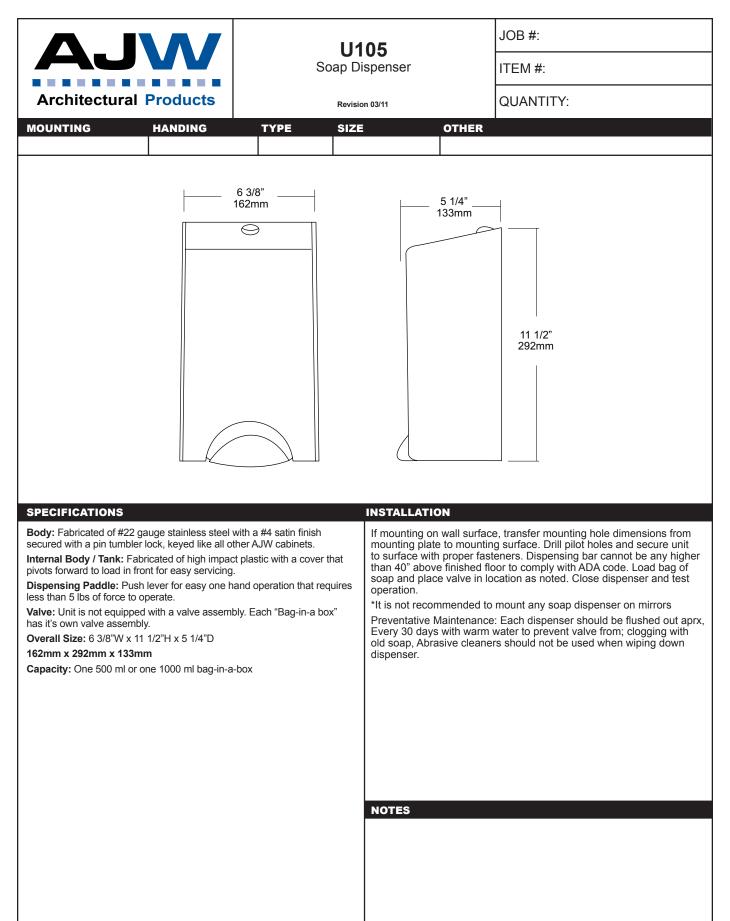



## U700 Installation Instruction Sheet

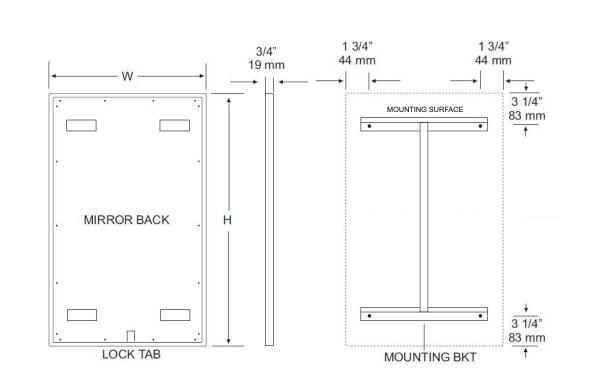

## INSTALLATION

Coordinate installation with architect / contractor for specific mounting location and height for each mirror application. Making sure "I" bracket is level, transfer all mounting point locations to wall surface from drawing. Secure brackets with proper fasteners for each application. Slide mirror down over horizontal brackets until clip lock secures mirror in place. Mirror can only be removed by inserting tool through hole at bottom of frame depressing clip. This will allow mirror to slide up over brackets. Fillers are available if mirrors are mounted above and below tile line. (U004 Filler) Filler material will match mirror frame to form a one piece construction.

To meet ADA Code, bottom edge of reflective surface can be no higher than 40" above finished floor. (4.19.6) Full length mirrors may be used for universal application when installed in correct locations.

## CARE & CLEANING

Wipe mirrors with a soft cloth, taking special care to rub stainless steel frames with the grain to avoid scratching. Do not use abrasive cleaners containing chloric solutions on stainless steel frames. Glass Plus or other window cleaning products are ideal.

AJW	U795 Series Surface Mounted Tray Revision 03/11			JOB #:
			ITEM #:	
Architectural Products			QUANTITY:	
MOUNTING HANDING	TYPE SIZE		OTHER	
0	C 1 1/2" 38 mm HALF THE LENGTH OF S		1/2" <sup>⊥</sup> 13 mm	6" 152 mm 2" SUPPORT BRACKET
SPECIFICATIONS Shelves: #18 ga stainless steel. Shelf ends and welded . Front edge is turned down 1/2"back for corners are heliarc welded, ground and polishe 3/8" deep recess to prevent rolling of articles pla surfaces have a #4 satin finish. Standard Lengths: 12", 16", 18", 24" Shelf Depth: Surface mounted shelf 6"D.	INSTALLATION Provide an area on wall surface at desired or specified location. Place unit up to wall making sure unit is level. Transfer mounting points to surface and drill pilot holes. Secure shelf to surface with proper fasteners per each application. NOTES			

