date projectname attn from fax email phone 9/19/22 RFQ 9/19/22 RFQ 9/19/22



### **U650**

Folded Towel & Waste Combination Unit

JOB #:
ITEM #:
QUANTITY:

Revision 10/14

MOUNTING	HANDING	TYPE	SIZE	OTHER	
17 1/4 438 m —15 1/ 387 m	17" 432 mm  54" 1372 mm  23" 584 mm	TYPE  1/4" 6 mm	4 1/4" 108 mm - 1575 mm)  Recommended Mounting Height	4 1/4" 108 mm 2 1/4" 57 mm	
÷s	584 mm F	Removable Waste 4" 102 mm	.;s 	-SM -S2	

### **SPECIFICATIONS**

**Body:** Fabricated of #22 ga stainless steel with a #4 satin finish.

**Flange:** Fabricated of #22 ga stainless steel finished to match cabinet with 1/4" returns. (No miters or welds)

Cabinet Back: Fabricated of stainless steel formed for rigidity with multiple welds to cabinet body.

**Cabinet Door:** Fabricated of #22 ga stainless steel with #4 satin finish.

**Towel Dispenser:** Fabricated of #22 ga stainless steel with hemmed edges to prevent injury and towel tearing.

**Removable Waste:** Fabricated of #22 ga stainless steel #4 satin finish with all leading edges to have a radius. Unit is secured in place by a bottom bracket guide and top lock.

Hinge: Full length, heavy duty, stainless steel piano type hinge.

**Locks:** Pin tumbler commercial quality, keyed like all other AJW cabinets. **Collars:** Fabricated of #22 ga stainless steel, finished to match cabinet.

(Used when full recessing cannot be accomplished)

Overall Size: 17 1/4"W x 54"H x 8 1/4"D

438mm x 1372mm x 210mm

Wall Opening: 15 3/4"W x 52 1/2"H x 4"D

400mm x 1334mm x 102mm

U650-S2: semi-recessed. with 2" collar, 2" wall opening 51mm

U650-SM: Full surface mounted collar.

Towel Capacity: 600 c-fold or 800 multifold

Waste Capacity: 12 gallons (1.6 cu ft)

Options : -VL1: Vinyl Liner

#### INSTALLATION

Coordinate installation with architect and contractor to avoid interference with pipes, vents, etc. Provide a rough wall opening 15 3/4"W x 52 1/2"H. See chart for required wall depth. If collar is required, slide collar over the back before installing into wall. Remove waste from cabinet and mount unit plumb and true in opening with proper fasteners per application. Secure waste in cabinet and load paper towels.

When cleaning cabinet use a non abrasive non-chloric solution and wiped off with the grain of the cabinet.



# U720-1824

Medicine Cabinet

JOB #:	
ITEM #:	
QUANTITY:	

Revision 02/12

MOUNTING	HANDING	TYPE	SIZE	OTHER	
2 ADJ. SHELVES		24" 609 mm	19 1/2" 495 mm	RECOMMENDED MOUNTING HEIGHT  + s  - s  - s  - s  - s  - s  - s  - s	2 7/8" 73 mm
			REC.	-SM	-\$2

### **SPECIFICATIONS**

Cabinet Body: Fabricated of #22 ga stainless steel formed for rigidity. Embossed louvers in body allow shelving to be adjustable. Flange surrounds cabinet body that has 1/4" returns to wall. (No miters or welds)

Cabinet Back: Stainless steel secured to cabinet body with multiple welds to cabinet body.

Mirror Door: 1/4" thick float plate glass, silver coated and sealed with a uniform coating of electrolytic copper plating. Mirror is guaranteed against silver spoilage for a period of 15 years. Non-absorbent filler behind mirror acts as a shock absorber.

Channel Frame: #22 ga stainless steel #4 satin finish.

Adjustable Shelving: Two (2) #22 ga stainless steel with #4 satin

Catch: Heavy duty magnetic catch.

Hinges: Full length, heavy duty stainless steel piano type

Collars: #22 ga stainless steel with #4 satin, one piece construction,

finished to match cabinet body. Overall Size: 18"W x 24"H x 4 7/8"D 457mm x 609mm x 124mm

Wall Opening: 14"W x 20"H x 4"D 355mm x 508mm x 102mm

U720-1824-S2: 2" semi-recessed collar, 2" wall opening

U720-1824-SM: Fully surface mounted collar

### **INSTALLATION**

Coordinate installation with architect and contractor. Provide a wall opening 14"W x 20"H. Depth will depend on style mounting. Insert cabinet into opening making sure cabinet is level and door will remain open until you manually close it. Secure cabinet with proper fasteners per application. Unit can be mounted to have a right hand or left hand swing door. Collars can be added in the field to accommodate semirecessing or full surface mounting.

To comply with ADA code, one usable shelf must be mounted no higher than 44" above finished floor. (4.2.4)



### **U939**

Retractable Shower Bench

JOB #:
ITEM #:
QUANTITY:

Revision 12/14

MOUNTING	HANDING	TYPE	SIZE	OTHER
	2	3 1/2" 16 mm	14 356 mm	3/4" 19 mm 25 mm  18" 457 mm  11/2" 292 mm
	37	'1 mm		

### **SPECIFICATIONS**

**Seat:** Fabricated of 3/4" thick, one piece polymers (white) with all leading edges having a radius to prevent injury. Seat is secured to frame with carriage bolts and acorn nuts.

**Tubing:** Fabricated of #18 ga stainless steel with #4 satin finish.

Main Frame: 1 1/4" diameter square tubing with capped ends.

**Flanges:** #18 gauge stainless steel with four (4) countersunk exposed mounting points. Under slung supports have a 1 1/4" OD. (Satin finish)

**Mounting Bracket:** #14 ga stainless steel "hat" style bracket with 4 mounting support points. Bracket acts as a guide to raise and lower seat platform and is equipped with four (4) points to secure to wall surface. For maximum support, bracket is mounted so the bottom is set on the finished floor surface. Seat will remain in an upright position when not in use by means of a spring clip.

Overall Size: 20 1/4"W x 14"D (seating area)

514mm x 356mm

\*Wall to floor mounting design provides equal distribution of weight to ensure safe operation.

### INSTALLATION

To comply with ADA Code, seat should be mounted at a height 17"-19" above finished floor. Check all state and local codes for building requirements. Recommend in wall mounting on all shower seats. (BP10) Place seat up against wall making sure the extended part of seat has an offset no more than 1 1/2" away from wall. (Same as grab bar) Transfer mounting points to wall surface and drill pilot holes. Secure seat to surface with proper fasteners per each application. Snugly secure seat to surface and check seat to be level. If seat is level raise and lower seat to check path of travel. Finish securing seat after checking seat for proper operation. When properly mounted seat will support up to 250 lbs and will conform with ADA Code 4.21.3 and 4.26.3

Note: This shower seat is not intended to be installed in applications that have shower bases with rounded corners. AJW recommends the U928 for such applications.

### NOTES

Formerly Model #: U939-1A



### UG3-A Grab Bars


JOB #:

ITEM #:

QUANTITY:

Revised 03/11

MOUNTING	HANDING	TYPE	SIZE	OTHER

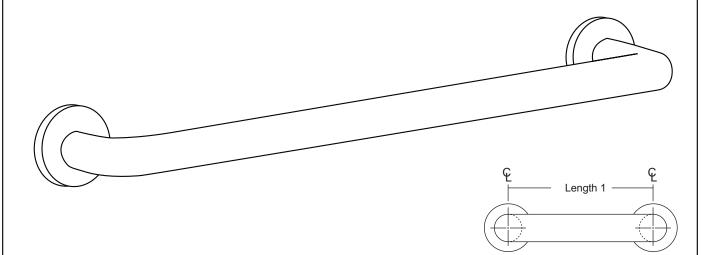

### **SPECIFICATIONS & INSTALLATION**

**Tubing:** Fabricated of #18 ga stainless steel with a #4 satin finish.

Available in 1 1/2" outside diameter. All bends are formed by an automatic mandrel bending process. All bars maintain a constant 1 1/2" offset.

**Finish:** Standard finish is a #4 satin finish. For a non-slip finish (peened) add suffix X to model number. (Ex. UG3X-A)

**Flanges:** Snap flanges are fabricated of 3" diameter, 3/8" deep drawn #22 ga stainless steel with #4 satin finish to match tubing. Flanges have dimples that secure over mounting plate.


**Strength:** Bars with a 1 1/2" offset clearance will support loads in excess of 900lbs when properly installed. Bars with greater offsets will support loads up to 250lbs when properly installed.

**Installation:** Before installing grab bars, verify with all state and local codes for requirements on bar diameter and type finish. Recommended mounting heights for grab bars are 33" - 36" centerline above finished floor. All mounting of grab bars when possible should have in wall mounting back plates. Find centerline mounting points and place bar on line making sure to be on center. Transfer mounting points (3 per flange) to wall. Drill pilot holes and secure bar with proper anchors per application. Snap cover over mounting plate.

**Standard Lengths (Other sizes available upon request):** 12", 16", 18", 24", 30", 32", 36", 42", 48", 50", 52", 54", 56"

## NOTES

### **FLANGE INFORMATION**

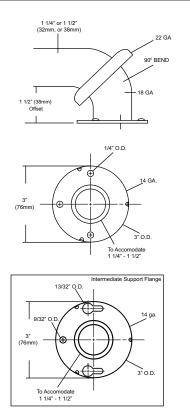




# **UX110-BF**


Single Robe Hook


JOB #:	
ITEM #:	
QUANTITY:	

Revision 03/11

MOUNTING	HANDING	TYPE	SIZE	OTHER

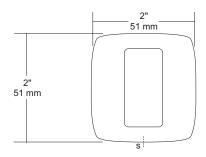

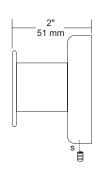

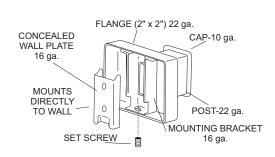

### **SPECIFICATIONS**

UX Accessories: All UX bath accessories series are fabricated of stainless steel with a bright or satin finish. Mounting plates are concealed with a snap-on type plate secured by a set screw.

Hook: #10 ga stainless steel hook.

Flange: 2" x 2" flange #22 ga stainless steel.

Post: #22 ga stainless steel.

Mounting Plate: #16 ga concealed wall plate. Set screw secures

mounting plate and flange. Overall Size: 2"W x 2"H x 1 5/8"D

51mm x 51mm x 41mm

UX110-SF: Same as UX110-BF with satin finish

### INSTALLATION

Provide an area on wall surface at desired or specified location. Place concealed mounting plate on wall surface and transfer mounting points. Drill pilot holes and secure with proper fasteners. Place snap on flange over plate and secure with set screw.



### **UX131-BF Series**

Square Towel Bar

JOB #:	
ITEM #:	
QUANTITY:	

Revision 03/11

MOUNTING	HANDING	TYPE	SIZE	OTHER
S o	L	S O	3 3/8" 86mm	S
2"	3/4" BAR 19 mm			FLANGE (2" x 2") 22 ga.  CONCEALED WALL PLATE 16 ga.  MOUNTS DIRECTLY TO WALL  SET SCREW  MOUNTING BRACKET 16 ga.

### SPECIFICATIONS

**UX Accessories:** All UX bath accessories series are fabricated of stainless steel with a bright or satin finish. Mounting plates are concealed with a snap-on type plate secured by a set screw.

Flange: 2" x 2" flange #22 ga stainless steel.

**Post:** #22 ga stainless steel. **Bar:** #22 ga stainless steel, 3/4" dia

Mounting Plate: #16 ga concealed wall plate. Set screw secures mount-

ing plate and flange.

Standard Lengths: 18", 24", 30", 36" (475mm, 610mm, 762mm, 914mm)

Overall Size: 2"H x 3 3/8"D (51mm x 86mm) UX131-SF: Same as UX131-BF with satin finish.

### **INSTALLATION**

Provide an area on wall surface at desired or specified location. The centerline distance between the mounting plates is 1/2" less than the length of the towel bar. Place concealed mounting plate on wall surface and transfer mounting plate on wall surface and transfer mounting points. Drill pilot holes and secure with proper fasteners. Place snapon flange over plate and secure with set screw. Repeat same step for second post. Place towel bar in post and place cover over plate to make sure spread is correct. Secure cover if bar fits.

N	О.	T	ℸ



### **UX141-BF**

Toilet Tissue Dispenser

JOB #:	
ITEM #:	
QUANTITY:	

Revision 03/11

MOUNTING	HANDING	ТҮРЕ	SIZE	OTHER
	5 1/2" 140 mm			3 7/8" 98 mm
		2" 51 mm	2" 51 mm	FLANGE (2" x 2") 22 ga.  DNCEALED ALL PLATE 16 ga.  MOUNTS DIRECTLY TO WALL  SET SCREW  FLANGE (2" x 2") 22 ga.  CAP-10 ga.  MOUNTING BRACKET 16 ga.

### **SPECIFICATIONS**

**UX Accessories:** All UX bath accessories series are fabricated of stainless steel with a bright or satin finish. Mounting plates are concealed with a snap-on type plate secured by a set screw.

Flange: 2" x 2" flange #22 ga stainless steel.

Post: #22 ga stainless steel.

Mounting Plate: #16 ga concealed wall plate. Set screw secures

mounting plate and flange.

Spindle: Spring loaded, chrome plated plastic.

Optional U007 Theft Resistant Adapter: Prevents spindle from being

removed until roll has been depleted. **Overall Size:** 7 1/2" W x 2"H x 1 5/8"D

51mm x 51mm x 43mm

UX141-SF: Same as UX141-BF with satin finish

### INSTALLATION

Provide an area on wall surface at desired or specified location. Place concealed mounting plate on wall surface and transfer mounting points. Drill pilot holes and secure with proper fasteners. Place snapon flange over plate and secure with set screw. Centerline space between posts is aprx. 5 1/2"W. Repeat same steps for other post. Place a roll of tissue on spindle and place in posts before securing the covers down securely. If roll spins freely, secure post with set screw. All toilet tissue dispensers must have a non-control delivery to meet ADA code. (4.16)



# **UX1K**Flange & Shower Rod

JOB #:
ITEM #:
QUANTITY:

Revision 03/11

MOUNTING	HANDING	TYPE	SIZE	OTHER	
	To Accommodate 1" Rod	3/16	S" OD		
			<b>}</b>	_ 2 1/8" 53mm	

#### **SPECIFICATIONS** INSTALLATION

 $\oplus$ 

Exposed Cover: Fabricated of #22 gauge stainless steel with a #4 satin finish. Cover has two (2) exposed mounting points.

3 1/8" OD

Shower Rod: Fabricated of 18 gauge stainless steel with a #4 satin finish. UX1: 1" outside diameter

Provide an area on wall surface at desired or specified location. Hold flange to wall surface and transfer mounting points. Drill pilot holes. Place flanges on the ends of the rods. Secure flanges to wall surface with proper fasteners per application.

7/16" <sup>1</sup>11mm<sup>[</sup>