


date projectname attn from fax email phone 4/13/20 CCCC Learning Center Boyd Williams



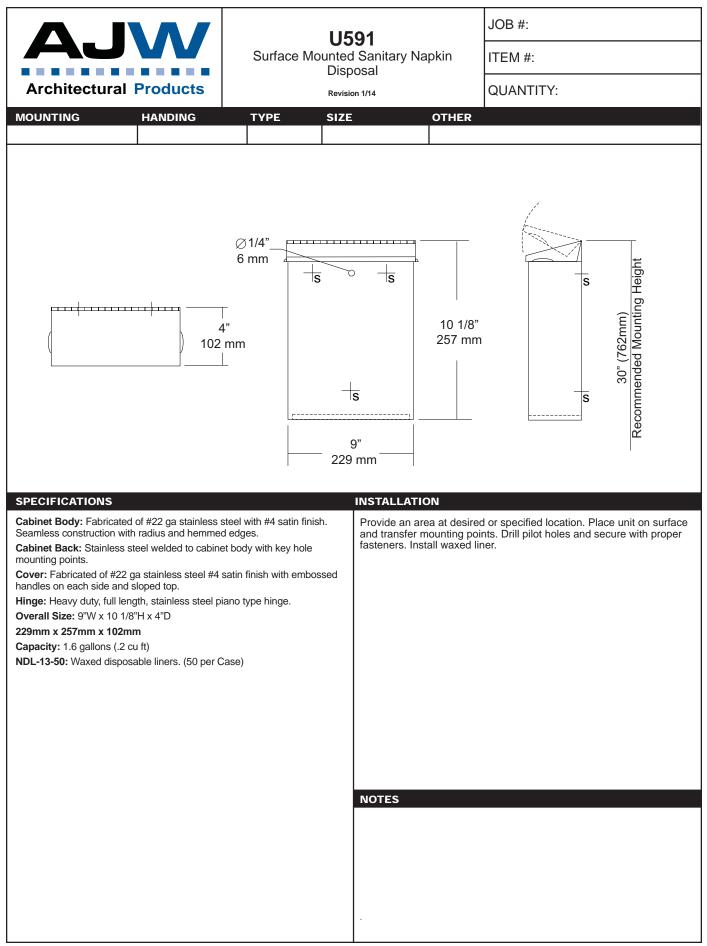

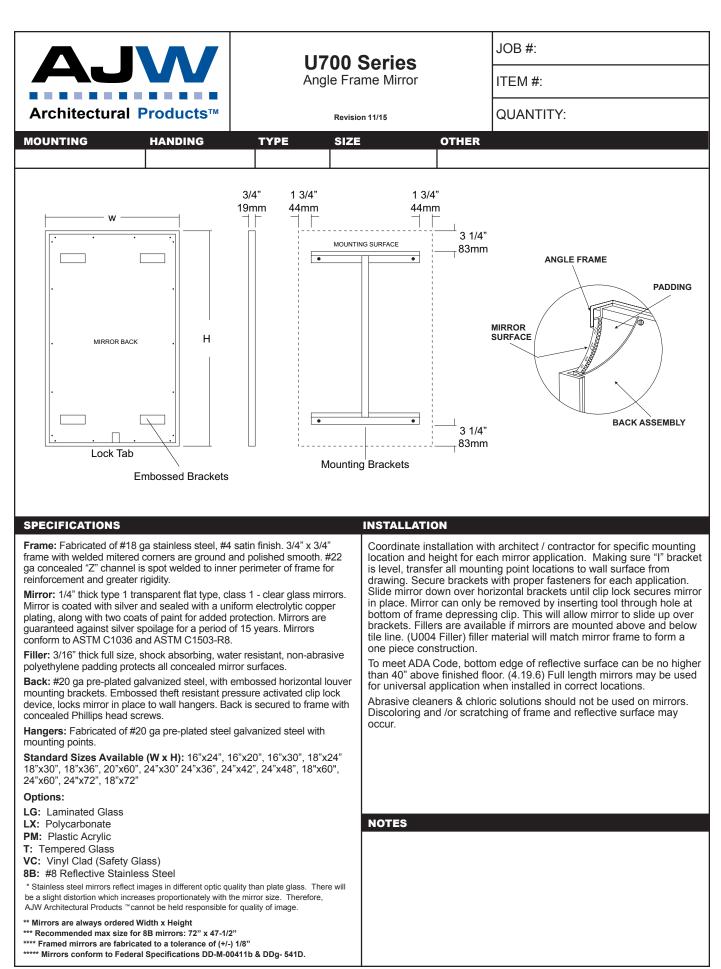

## U700 Installation Instruction Sheet

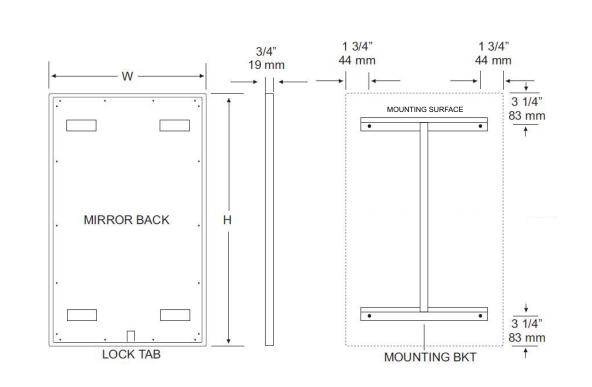

## INSTALLATION

Coordinate installation with architect / contractor for specific mounting location and height for each mirror application. Making sure "I" bracket is level, transfer all mounting point locations to wall surface from drawing. Secure brackets with proper fasteners for each application. Slide mirror down over horizontal brackets until clip lock secures mirror in place. Mirror can only be removed by inserting tool through hole at bottom of frame depressing clip. This will allow mirror to slide up over brackets. Fillers are available if mirrors are mounted above and below tile line. (U004 Filler) Filler material will match mirror frame to form a one piece construction.

To meet ADA Code, bottom edge of reflective surface can be no higher than 40" above finished floor. (4.19.6) Full length mirrors may be used for universal application when installed in correct locations.

## CARE & CLEANING

Wipe mirrors with a soft cloth, taking special care to rub stainless steel frames with the grain to avoid scratching. Do not use abrasive cleaners containing chloric solutions on stainless steel frames. Glass Plus or other window cleaning products are ideal.



| Δ.Ι\Λ/  |  | 220  |  | JOB #:   |
|---|--|--|--|--|
| AJW   | Jumbo Roll Toilet  | <b>832</b><br>Tissue Dispe   | nser   | ITEM #:  |
| Architectural Products  | Revision 03/11   |  |  | QUANTITY:  |
| MOUNTING HANDING  | TYPE SIZE  |  | OTHER  |  |
| 20 -   514   514   514   514   514   514   514   514   514   514   514   514   514   514   59   59   50   50   50   51   5 | BS material that allows a secured with special key rt of the cabinet body. | INSTALLATIO<br>Provide an area<br>unit up to wall r<br>Drill pilot holes<br>toilet tissue and<br>should not have | N<br>a on wall su<br>making sure<br>and secure<br>d secure ca<br>secure ca | rface at desired or specified location. Hold<br>with proper fasteners per application. Load<br>binet cover. All toilet tissue dispensers<br>controlled delivery to meet ADA code. (4.16)<br>spenses paper be minimum 19" above |
|   |  |  |  |  |
|   |  |  |  |  |