
date projectname attn from fax email phone 11/18/20 14000 Barracks Ken Charlie Mills

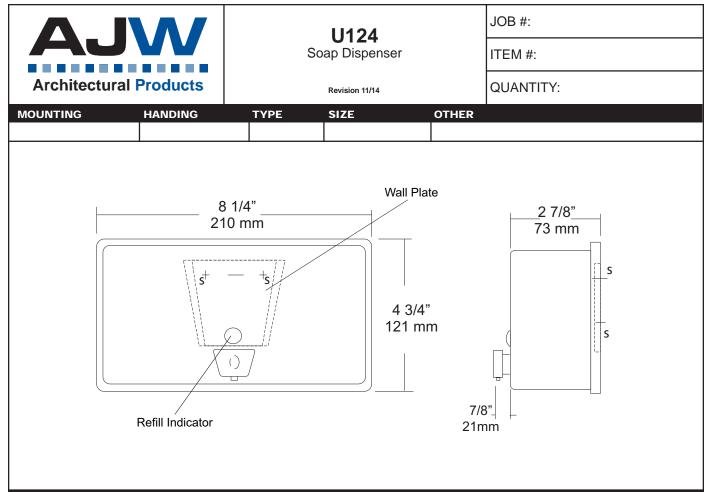

SPECIFICATIONS

Soap Tank: Fabricated of #20 ga stainless steel, #4 satin finish, fully welded one-piece construction.

Valve: All purpose antibacterial soap valve cylinder, black molded plastic push style valve that takes less than 5 lbs of force and one hand to operate comples with barrier free guidelines when mounted at proper height.

Viewer: Clear plastic window allows a constant fluid level check.

Concealed Mounting Plate: Fabricated of heavy gauge stainless steel. **Filler Cap:** Fabricated of stainless steel, hinged to allow easy servicing, secured with special key that creates a vandal resistant dispenser.

Overall Size: 8 1/4"W x 4 3/4"H x 3 3/4"D

210mm x 121mm x 95mm (Horizontal Mounting)

Capacity: 40 oz.

Recommend type soaps without chloric solutions for proper operation.

INSTALLATION


Provide an area on mounting surface at desired or specified location. Secure concealed mounting plate to wall surface with proper fasteners. Slide dispenser down over mounting plate and secure by means of set screw located inside tank. Fill unit with proper soap. Close lid and secure with special key. Test valve for proper operation.


*It is not recommended to mount any soap dispenser on mirrors


**For best performance, use pre-mixed low concentrate solutions. Dispensers should have periodic maintenance performed to insure the life dispenser. Rinse out globe and valve with warm water to avoid sludge buildup.


Preventative Maintenance: Each dispenser should be flushed out aprx, Every 30 days with warm water to prevent valve from; clogging with old soap, Abrasive cleaners should not be used when wiping down dispenser.

NOTES

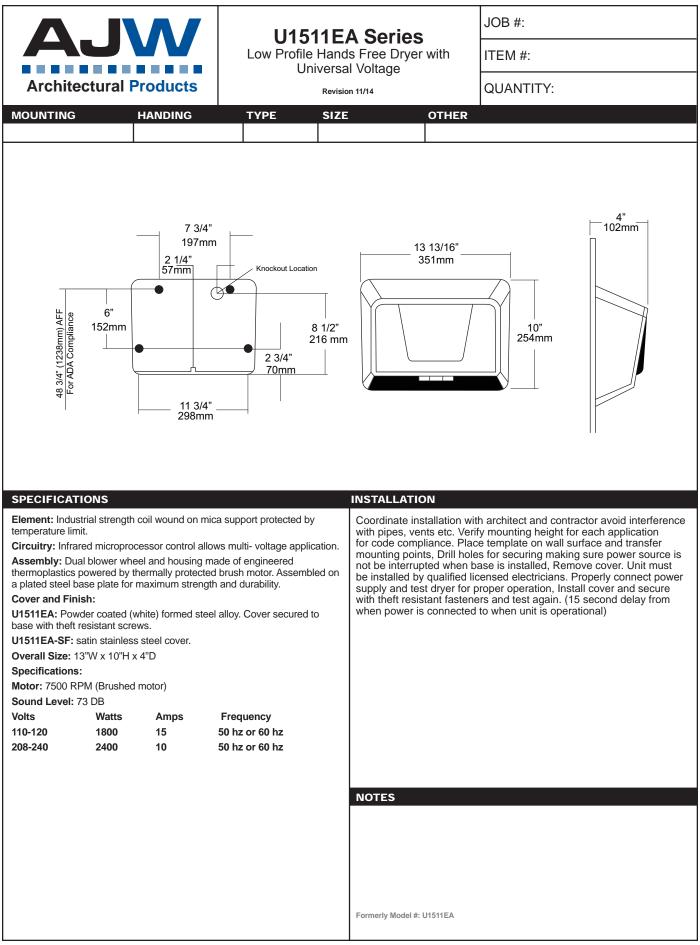

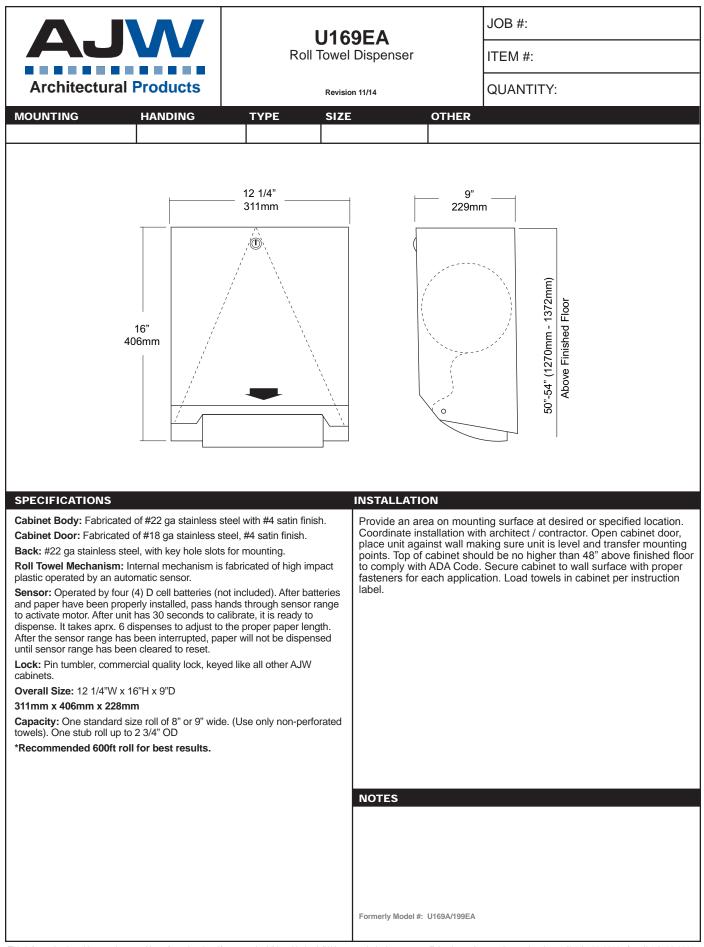


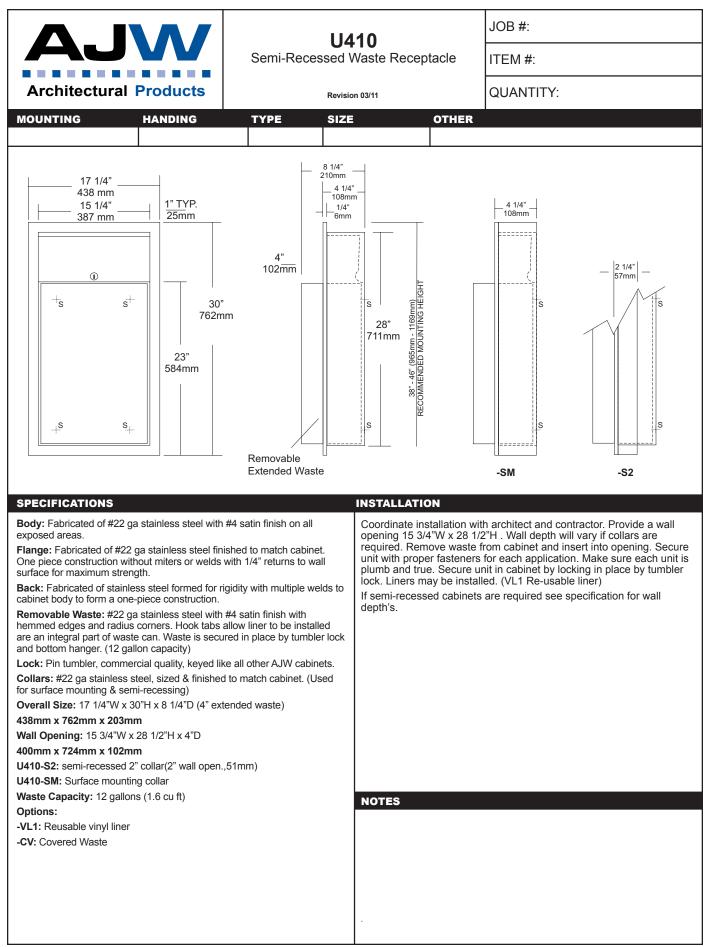

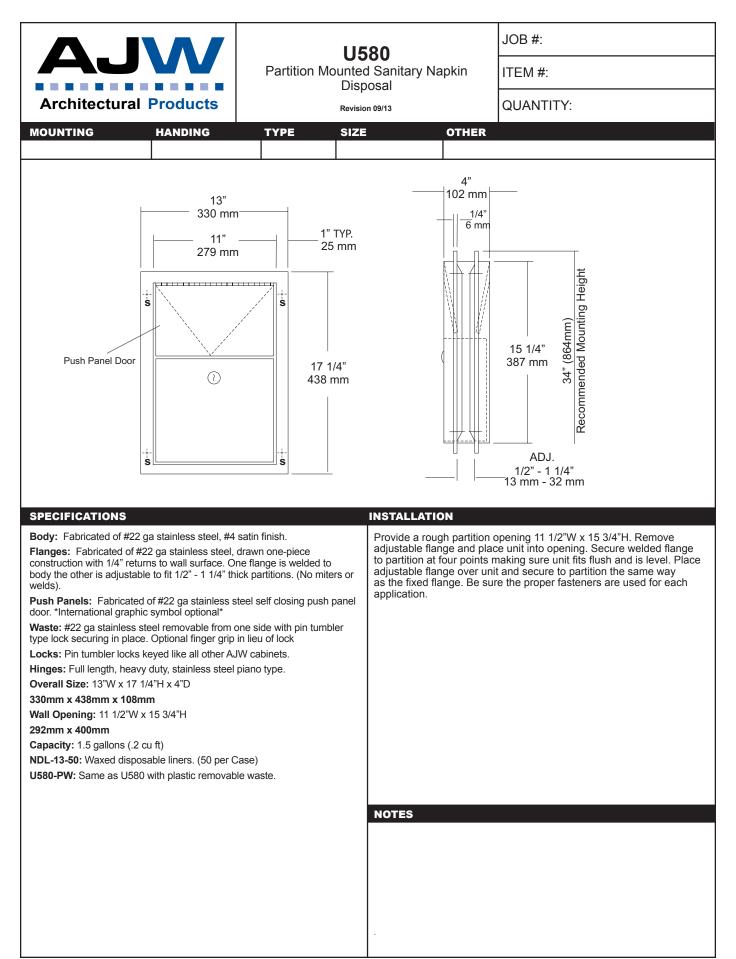



This information is subject to change without formal notice. If you need additional help, AJW has a technical support staff that is ready to assist you by phone: (845) 562-3332, fax: (845)562-3391, email: engineering@ajw.com or visit our website: www.ajw.com. Copyright © 2013 AJW Architectural Products

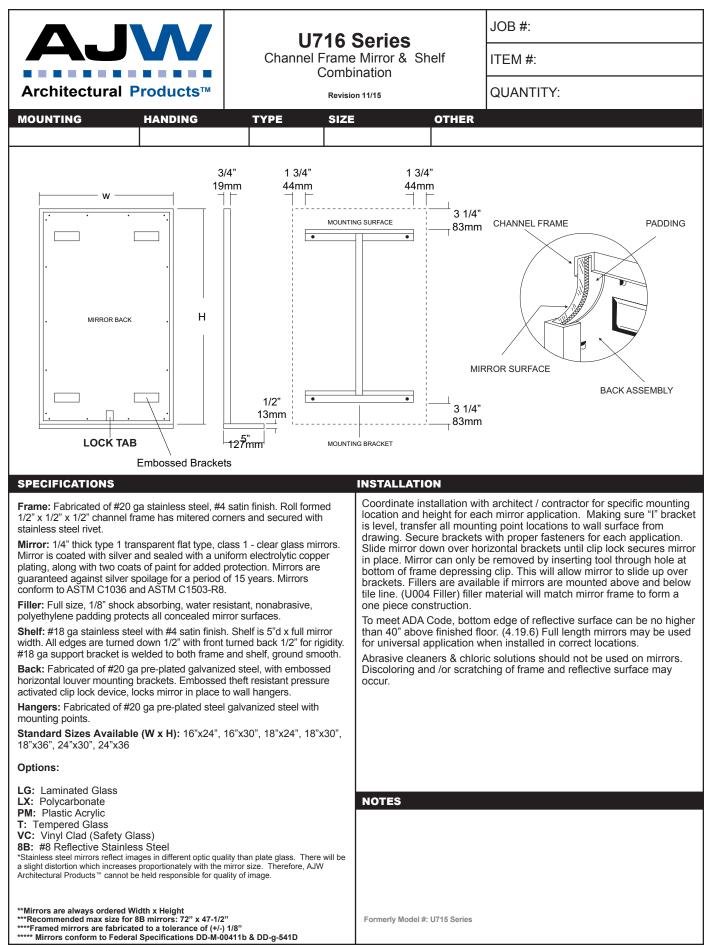



SPECIFICATIONS

Body: Fabricated of #22 ga stainless steel with #4 satin finish. Concealed inner dispensing mechanism is #18 ga stainless steel.

Back: Fabricated of #18 ga stainless steel with multiple welds to cabinet body forming a one piece construction.

Hood: Fabricated of #18 ga stainless steel finished to match cabinet body. Hood is secured with stainless steel hinge rivets to cabinet body. Top roll of tissue will not drop down unless the bottom roll has been depleted. When unit is closed, this will provide a theft resistant, non-control operation and reduce vandalism.

Locks: Pin tumbler, commercial quality locks keyed like all other AJW cabinets.

Spindles: (U005) Fabricated of one-piece molded high impact black ABS material.

Overall Size: 6"W x 12"H x 6 3/4"D

152mm x 305mm x 171mm

Capacity: Two standard rolls with a 5 1/4" (133mm) OD..


INSTALLATION


Provide an area on mounting surface at desired or specified location. Open cabinet, remove spindles and hold unit to wall at desired location. Transfer mounting points and drill pilot holes. Secure unit with proper fasteners per each application. Load toilet tissue on rollers, place in concealed track and close hood. Raise lower roll against upper and take hand away. Lower roll should fall into place with upper roll remaining up above the hood line. If loaded properly, top roll will not fall for use until bottom roll has been depleted. When servicing dispenser, full rolls must be used on both spindles to insure proper operation.

All toilet tissue dispensers that meet ADA code cannot have any type of control delivery. (4.16)

NOTES

Formerly Model #: U840A

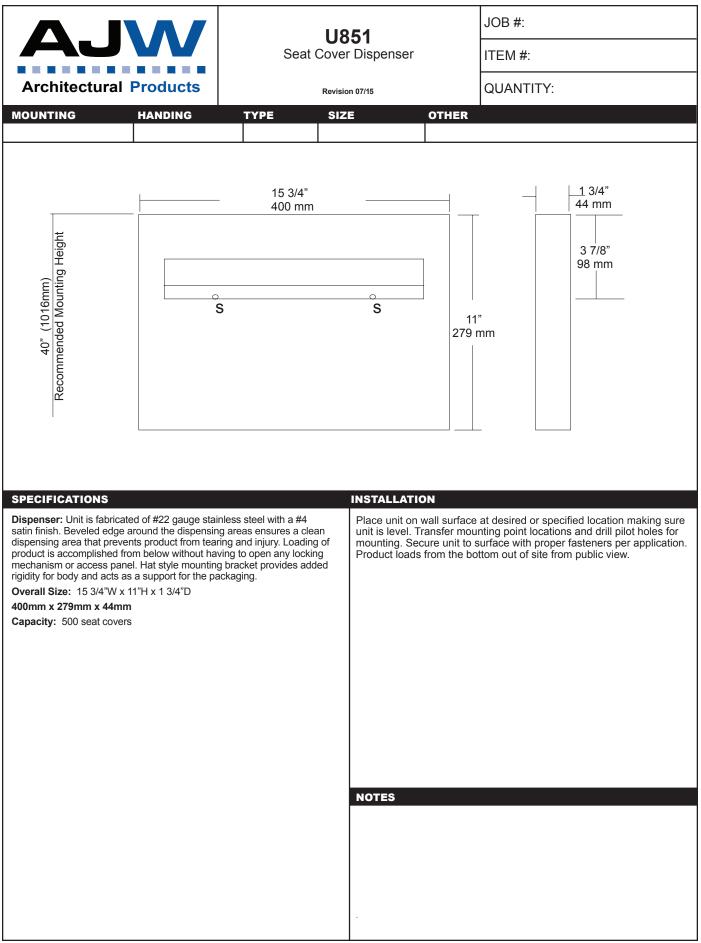


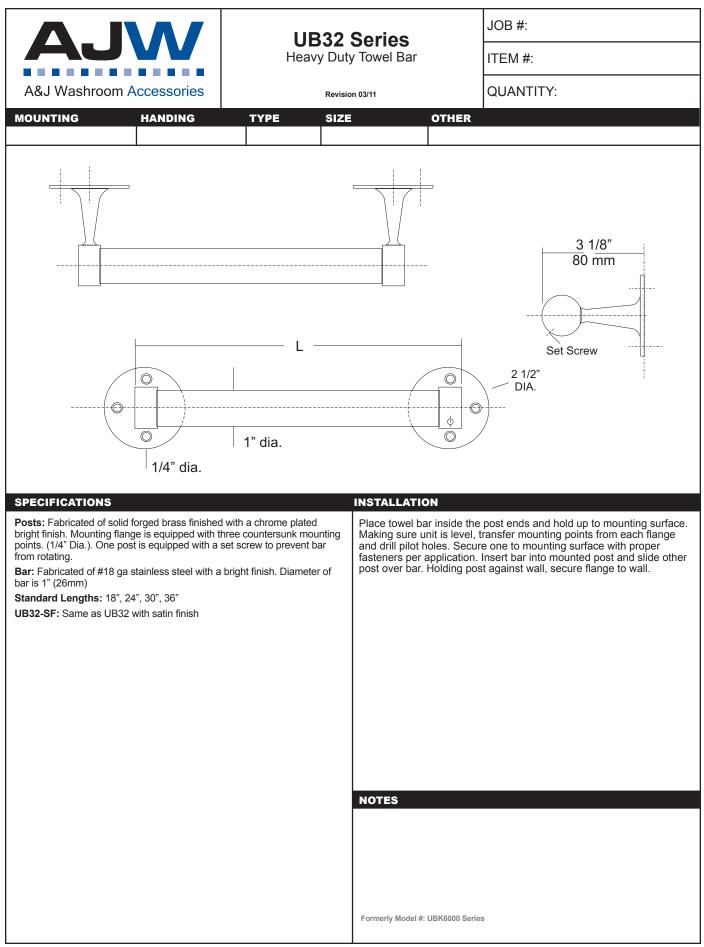









				JOB #:			
AJVV	UX1-B-CV Flange & Curved Shower Rod		ITEM #:				
Architectural Products	Revisio	Revision 03/12		QUANTITY:			
MOUNTING HANDING	TYPE SIZE		OTHER				
5 9/16" 141mm 25mm 141mm 60", 72" 1524mm, 1829mm (finish wall to finished wall dimension) 1524 wall to finished wall dimension) 1524 wall to finished wall dimension)							
SPECIFICATIONS		INSTALLATIO	N				
Rods: Fabricated of #18 ga stainless steel with outside diameter. Rod configuration is accompli provides an additional 5 9/16" showering area. (Flanges: 22 ga. exposed mounting stainless sta finish to match rod. One flange is permanently so other is loose for mounting purposes. 72"L is the size for this style rod. Overhead supports are no Overall Size: 1" O.D. Standard Sizes: 60", 72"	INSTALLATION Provide an area on wall surface at desired or specified location. Hold flange to wall surface and transfer mounting points. Drill pilot holes. Place flanges on the ends of the rods. Secure flanges to wall surface with proper fasteners per application. Make sure the shower rod is level before securing. NOTES						
		NOTES	ucvs				

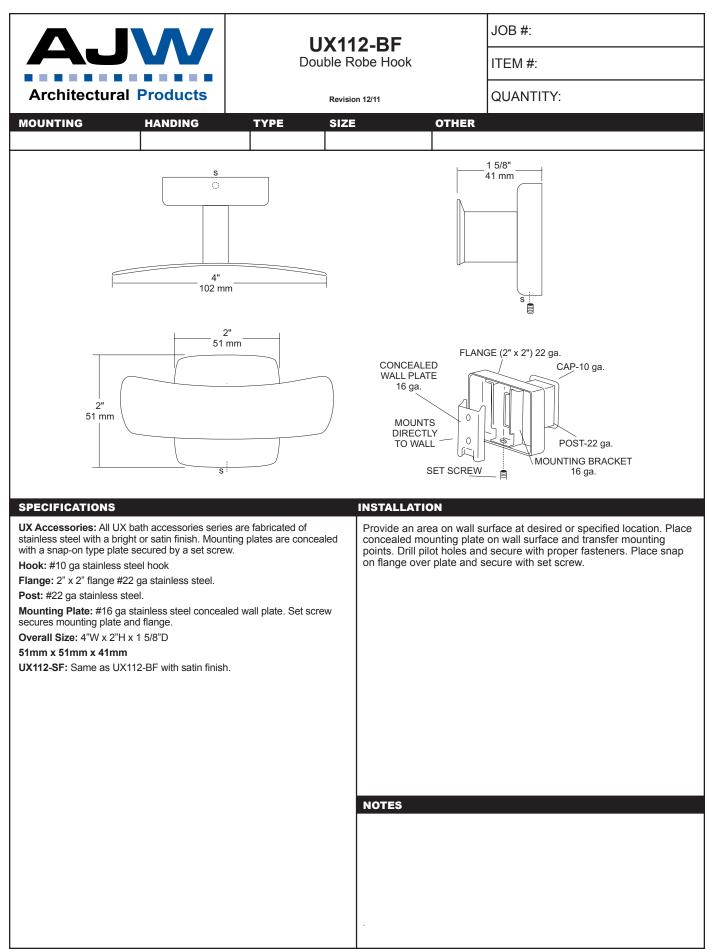

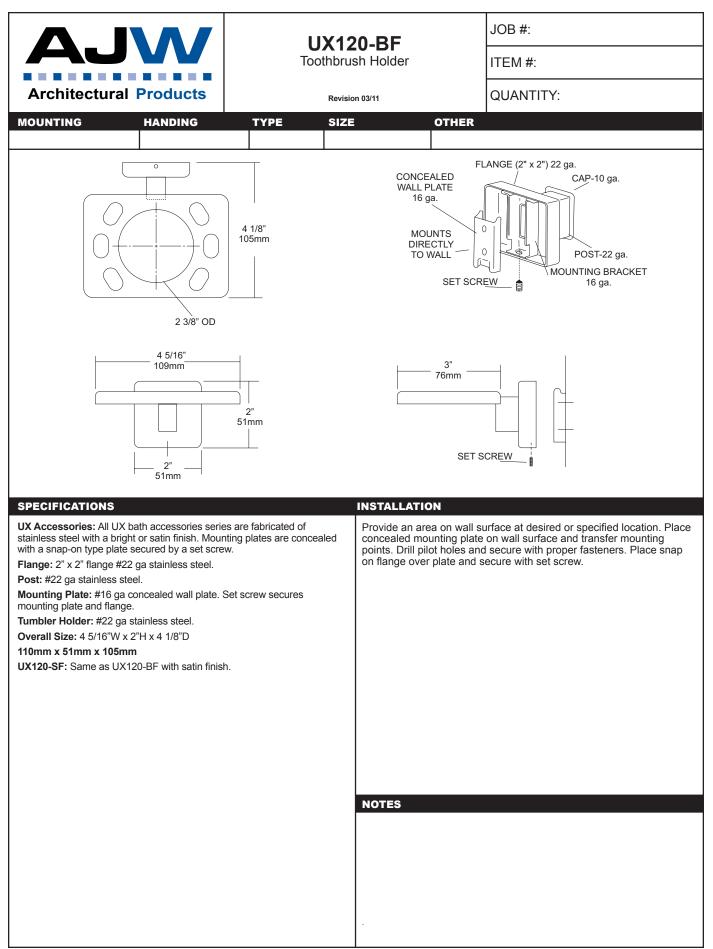

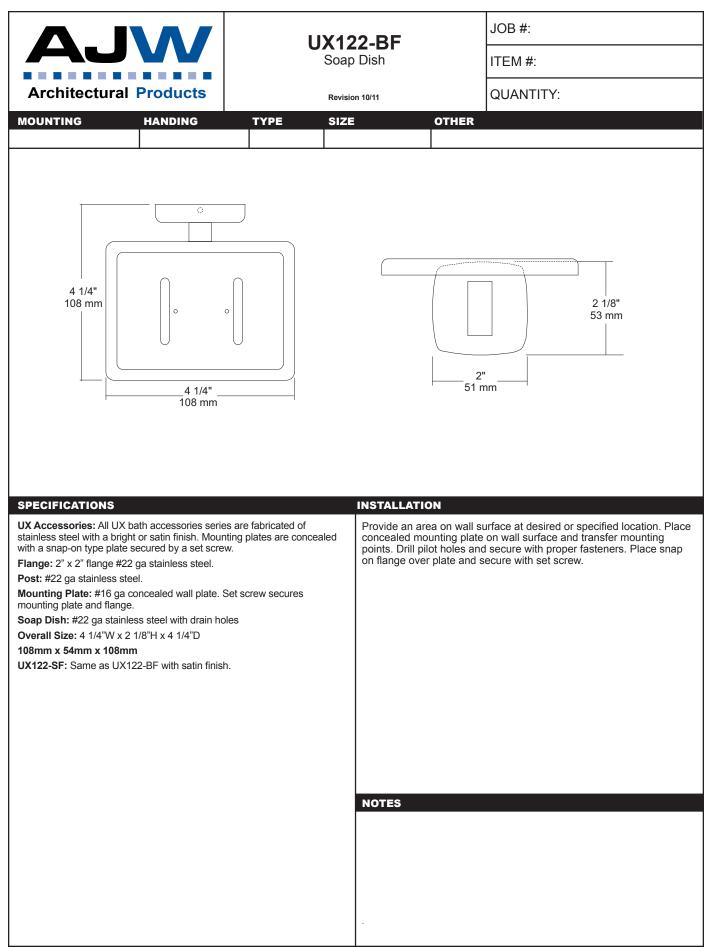

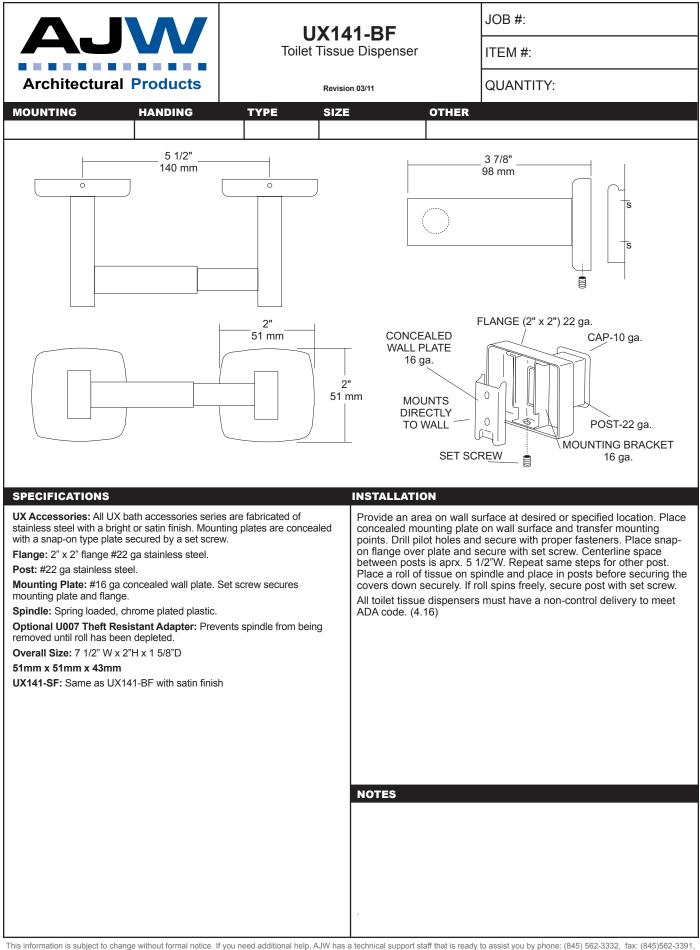

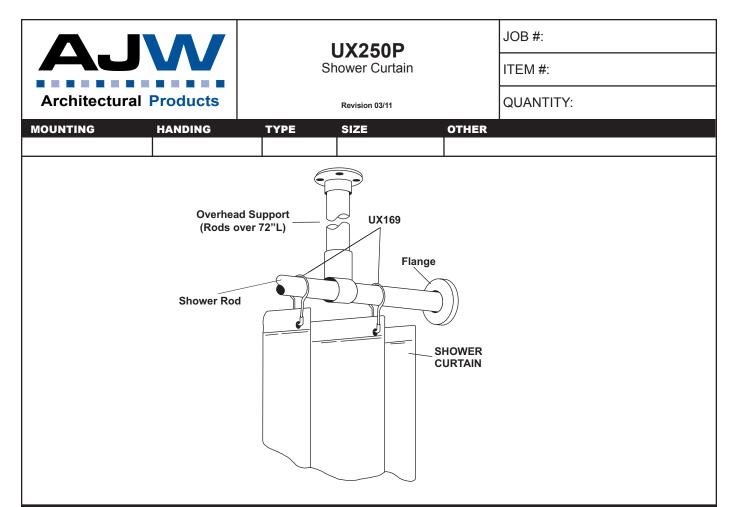

SPECIFICATIONS

Bacteria & Mildew Resistant: Heavy duty vinyl film (8 mil) that is flame retardant, durable and waterproof. Microbiotic KV-33 is an integral part added to the fabrication of this curtain that can be laundered repeatedly without losing this barrier against bacteria, fungus and mildew. KV-33 is a durable bacteriostat, mildewstat and fungistat that will provide protection for as long as you use this style curtain. It will retard the growth of organisms, thereby inhibiting odors caused by decaying bacteria.

Design: To insure the ultimate in bacteria free curtain, there are no side hems to hinder the flow-off of soap and water. This also makes cleaning easier. The heading is reinforced with a ten gauge vinyl film with rust proof anodized eyelets spaced 6" apart.

Cleaning: Sponge with warm mild soap and rinse with clear water.

Machine washing: Relatively cool water temp not to exceed 120 degrees F. DO NOT USE DETERGENTS. Air dry at low temp. Colors: Standard stock color is white. Special order for other colors are available on request.

*UX1-V/UX2-V: Overhead s/s supports for oversized shower rods. (For shower rods over 72" in length an overhead support is recommended)

UX1-V: 1" OD shower rods.

UX2-V: 1 1/4" OD shower rods.


INSTALLATION

Recommended: UX169 stainless steel shower curtain hooks to connect to AJW shower curtain rods. Various types of flanges are available to secure rod and curtain to mounting surface (exposed and concealed).

Measuring Curtains: Curtains are measured W x H. The same curtain will fit a 1 or 1 1/4" diameter rod.

NOTES

Formerly Model #: 250P

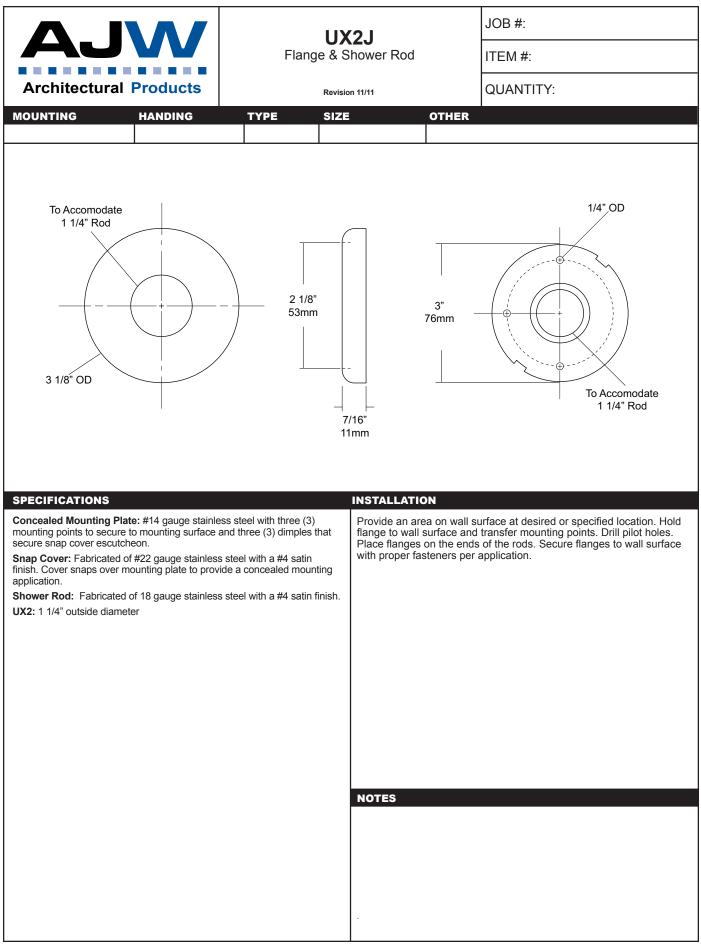

		20	JOB #:	JOB #:	
AJVV	UX938 Retractable Clothesline		ITEM #:	ITEM #:	
Architectural Products	Revisio	Revision 03/11		QUANTITY:	
MOUNTING HANDING	TYPE SIZE	ОТН	IER		
3 9/16" 90mm 90mm SPECIFICATIONS Shell: Fabricated of highly polished stainless stee		INSTALLATION	mplate $s = 15/8^{\circ}$	2 9/16" 65mm Template	
Shell: Fabricated of highly polished stainless stee back plate are fabricated of heavy gauge stainless equipped with a spring actuated reel and vinyl cor Locking knob on face of cover is chrome plated ar point for clothes line. Overall Size: 3 9/16"OD x 2 3/16"D 89mm x 57mm	s steel. Back plate is d that will extend 85"L.	surface at desired o drill pilot holes. Sec (Fasteners not inclu	clothes line and mounting br r specified location. Transfer ure units with proper fasteners ded) Clothes line has a maxir acket to accommodate this dis	mounting points and s for each application. num length of 85",	