

date projectname attn from fax email phone 1/4/21 MC Dean - Hanover Specialties LLC Jeff Boyles

804.789.1088







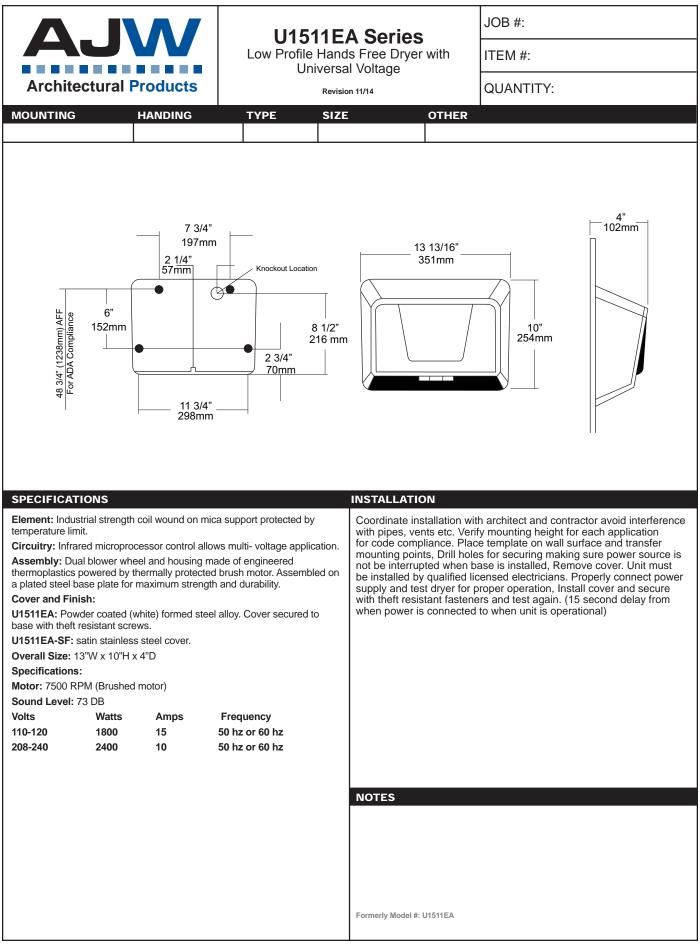


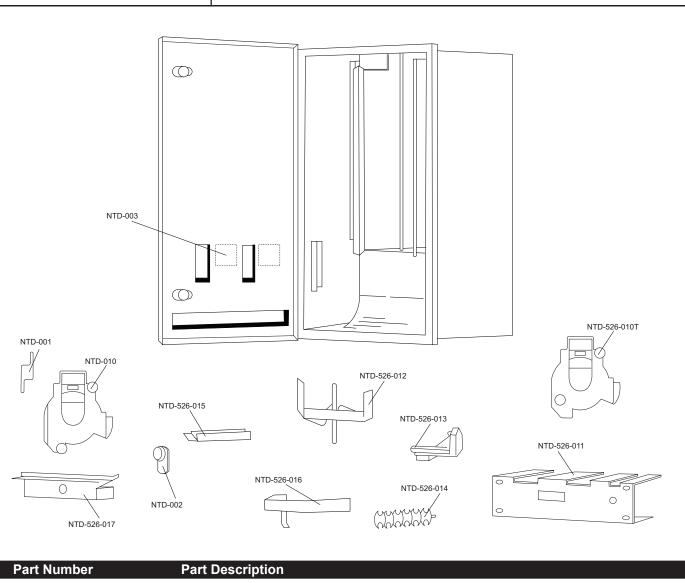


Part Number	Part Description		
NTD-001	Turn knob with set screw		
NTD-002	HL100 lock & key		
NTD-003	Coin & denomination label		
NTD-526-011	Mounting plate		
NTD-526-012	Two stack finger plate		
NTD-526-013	Flipper horn		
NTD-526-014	Tampon rotor		
NTD-526-015	Tampon weight		
NTD-526-016	Napkin weight		
NTD-526-10N	Coin mechanism for napkin dispenser only (.10, .25, .50 & Free)		
NTD-010	Coin mechanism for tampon dispenser (.10, .25, .50 & Free)		
NTD-526-017	Coin box		

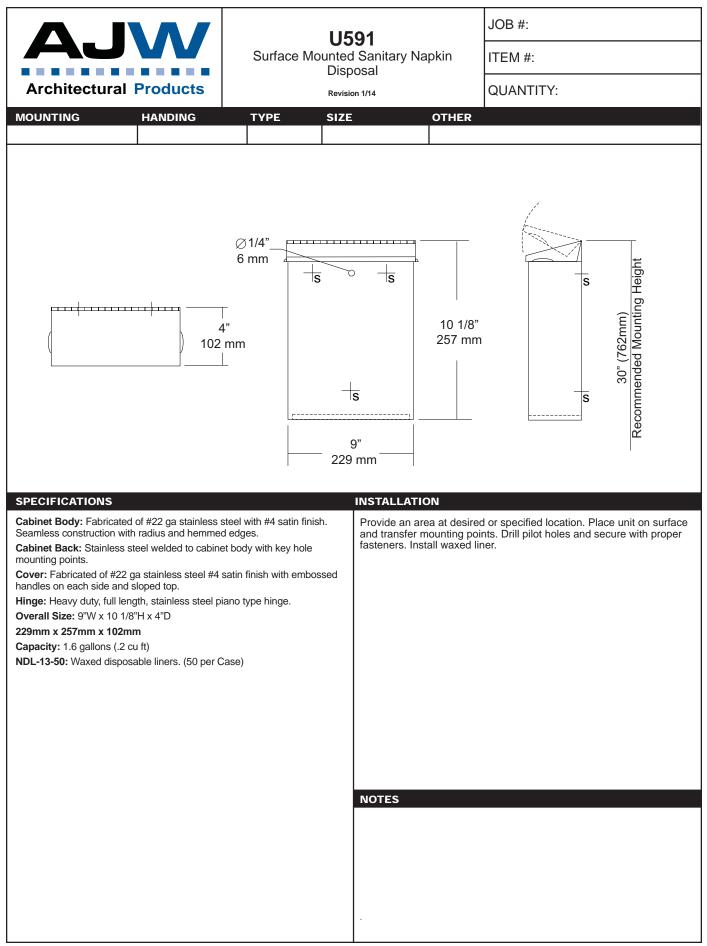

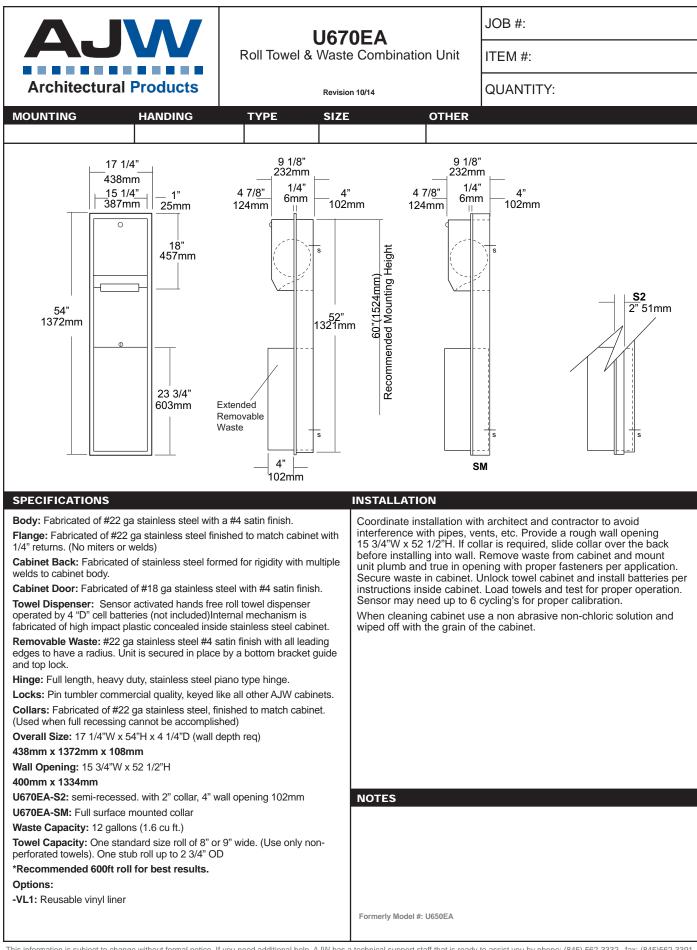

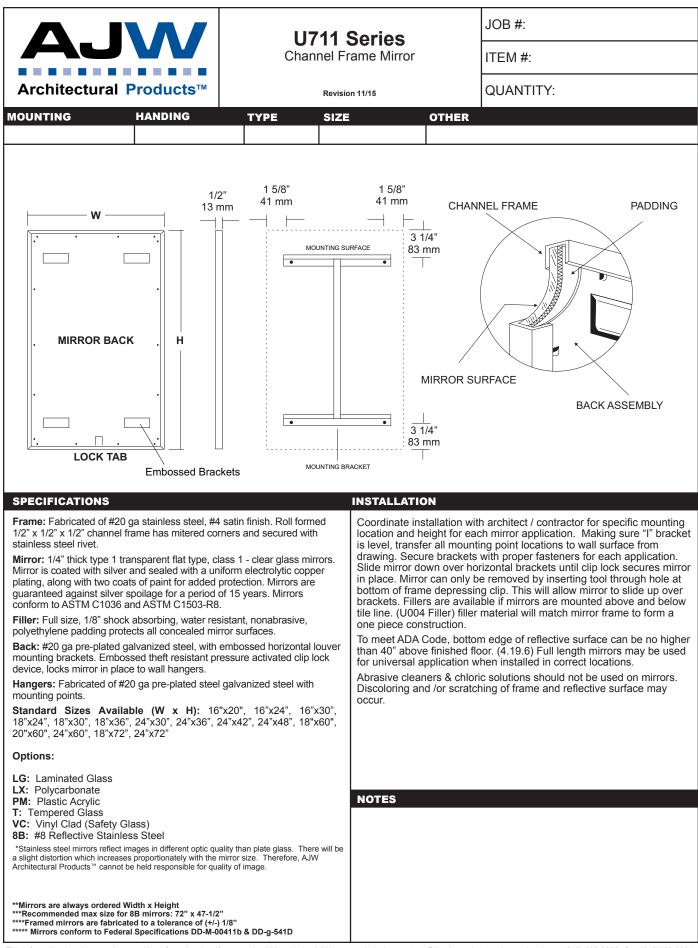

This information is subject to change without formal notice. If you need additional help, AJW has a technical support staff that is ready to assist you by phone: (845) 562-3332, fax: (845)562-3391, email: engineering@ajw.com or visit our website: www.ajw.com. Copyright © 2013 AJW Architectural Products

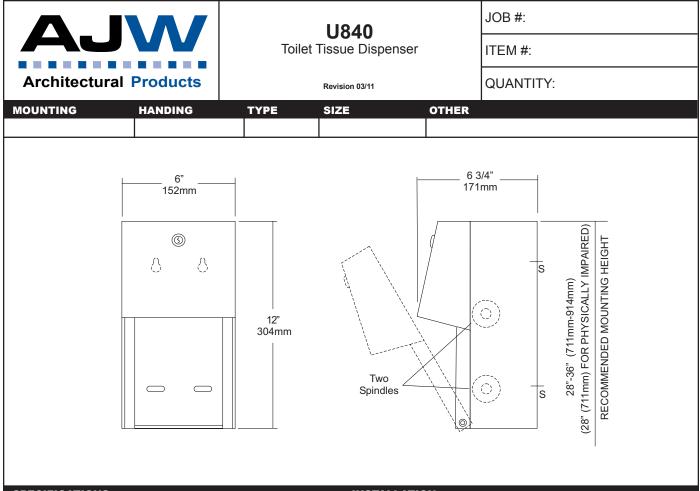

SPECIFICATIONS

Body: Fabricated of #22 ga stainless steel with #4 satin finish. Concealed inner dispensing mechanism is #18 ga stainless steel.

Back: Fabricated of #18 ga stainless steel with multiple welds to cabinet body forming a one piece construction.

Hood: Fabricated of #18 ga stainless steel finished to match cabinet body. Hood is secured with stainless steel hinge rivets to cabinet body. Top roll of tissue will not drop down unless the bottom roll has been depleted. When unit is closed, this will provide a theft resistant, non-control operation and reduce vandalism.

Locks: Pin tumbler, commercial quality locks keyed like all other AJW cabinets.

Spindles: (U005) Fabricated of one-piece molded high impact black ABS material.

Overall Size: 6"W x 12"H x 6 3/4"D

152mm x 305mm x 171mm

Capacity: Two standard rolls with a 5 1/4" (133mm) OD..


INSTALLATION

Provide an area on mounting surface at desired or specified location. Open cabinet, remove spindles and hold unit to wall at desired location. Transfer mounting points and drill pilot holes. Secure unit with proper fasteners per each application. Load toilet tissue on rollers, place in concealed track and close hood. Raise lower roll against upper and take hand away. Lower roll should fall into place with upper roll remaining up above the hood line. If loaded properly, top roll will not fall for use until bottom roll has been depleted. When servicing dispenser, full rolls must be used on both spindles to insure proper operation.


All toilet tissue dispensers that meet ADA code cannot have any type of control delivery. (4.16)


NOTES

Formerly Model #: U840A

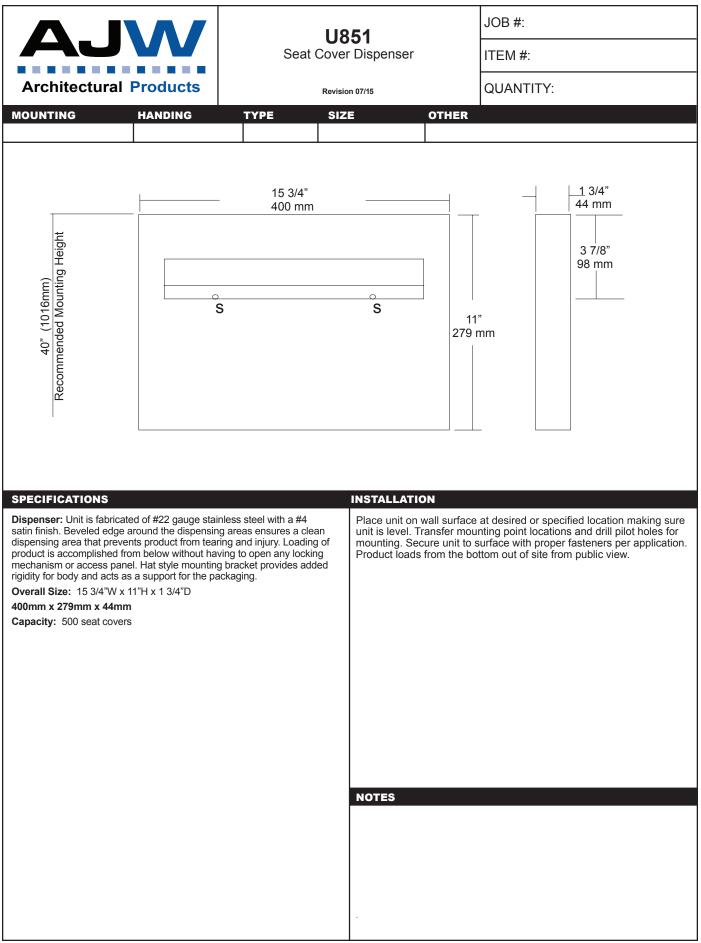



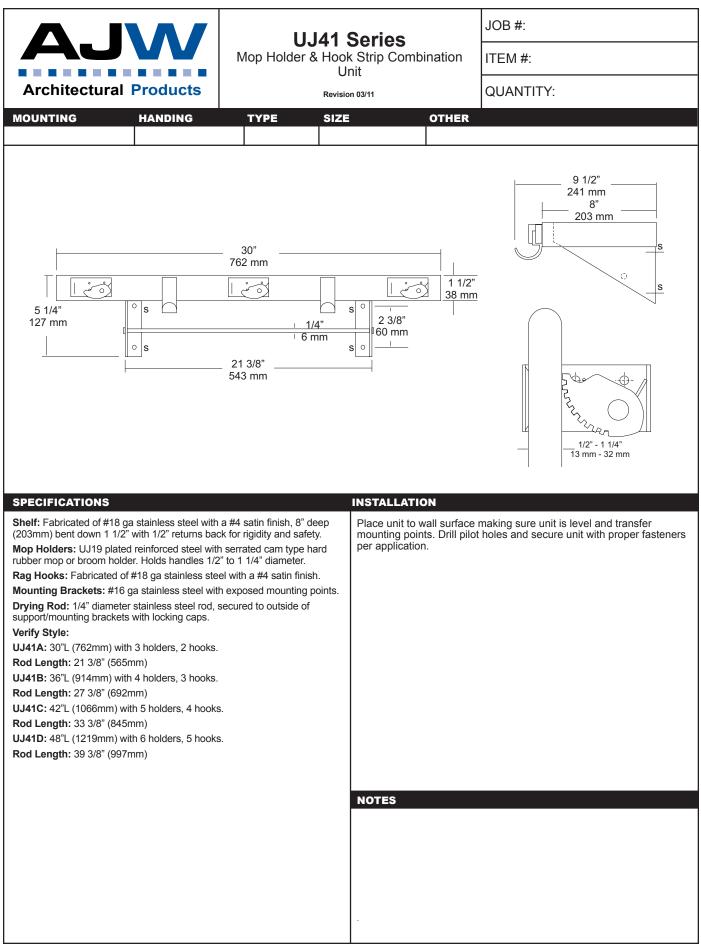

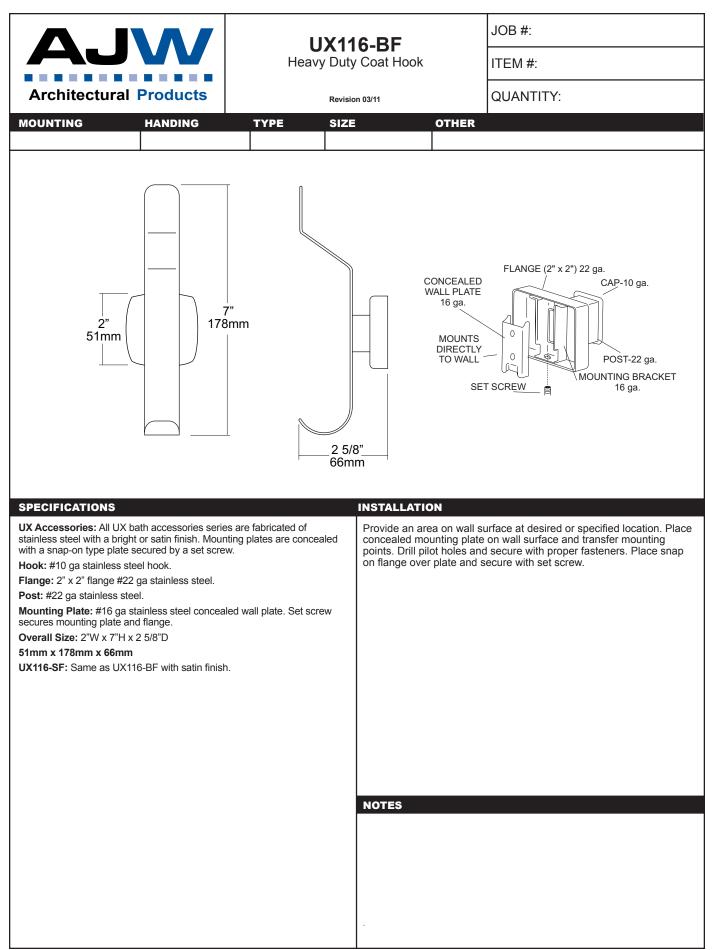

		5	JOB #:
AJW	UX1B Flange & Shower Rod Revision 03/11		ITEM #:
Architectural Products			QUANTITY:
MOUNTING HANDING	TYPE SIZE	OTHER	
To Accomodate 1" O.D. Shower Rod SPECIFICATIONS Exposed Cover: Fabricated of #22 gauge stain finish. Cover has 2 (2) exposed mounting points Shower Rod: Fabricated of 18 gauge stainless UX1: 1" outside diameter	The steel with a #4 satin finish.	4" O.D. 0mm STALLATION STALLATION rovide an area on wall surface and ace flanges on the ends ith proper fasteners per a th proper fasteners per a	urface at desired or specified location. Hold transfer mounting points. Drill pilot holes. of the rods. Secure flanges to wall surface application.

