
date projectname attn from fax email phone 02/09/2021 Aqaba Project

AL HARB FOR MEDICAL SUPPLIES

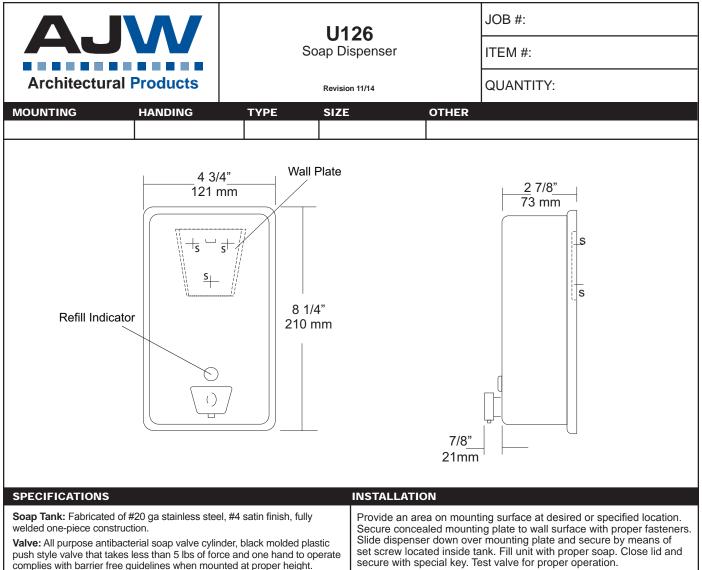

Viewer: Clear plastic window allows a constant fluid level check.

Concealed Mounting Plate: Fabricated of heavy gauge stainless steel. Filler Cap: Fabricated of stainless steel, hinged to allow easy servicing, secured with special key that creates a vandal resistant dispenser.

Overall Size: 4 3/4"W x 8 1/4"H x 3 3/4"D (wall to valve)

121mm x 210mm x 95mm

Capacity: 40 oz.

Recommend type soaps without chloric solutions for proper operation.

secure with special key. Test valve for proper operation.


*It is not recommended to mount any soap dispenser on mirrors


**For best performance, use pre-mixed low concentrate solutions. Dispensers should have periodic maintenance performed to insure the life dispenser. Rinse out globe and valve with warm water to avoid sludge buildup.

Preventative Maintenance: Each dispenser should be flushed out aprx. Every 30 days with warm water to prevent valve from clogging with old soap. Do not use abrasive cleaners to clean dispenser.

NOTES


AJVA Architectural Products	1142000	JOB #:
	U129PC Vanity Mounted Soap Dispenser	ITEM #:
	Revision 07/11	QUANTITY:
MOUNTING HANDING	TYPE SIZE OT	HER
SPECIFICATIONS	MAX	e Collar
 Piston & Spout: Highly polished corrosion resi Assembly rotates 360 degrees. Flange & Collar: One piece highly polished chu Valve Assembly: All purpose bellows valve, fal with stainless steel return spring. Shank: Chrome on brass, secured to collar. Sp unlocks collar for servicing. Globe & Collar: High impact translucent polyet Capacity: 16 fl oz U129PCA: Same as U129PC with 6" (152mm) Recommend type soaps without chloric solut operation. *All vanity soap dispensers are designed to counter 	ome on brass.through cut out and Connect supply tub Secure globe and o upper assembly to *It is not recommen **For best performa Dispensers should the life dispenser. F sludge buildup.spout.Preventative Mainte Every 30 days with soap. Do not use a	diameter opening in vanity or basin. Insert shank I secure with supplied washers and wing nut. with valve making sure notch end is at bottom. collar to shank. Fill globe above counter. Secure shank. Prime dispenser every time unit is serviced. added to mount any soap dispenser on mirrors ance, use pre-mixed low concentrate solutions. have periodic maintenance performed to insure Rinse out globe and valve with warm water to avoid enance: Each dispenser should be flushed out aprx. warm water to prevent valve from clogging with old brasive cleaners to clean dispenser.
	Formerly Model #: U129-F	°C

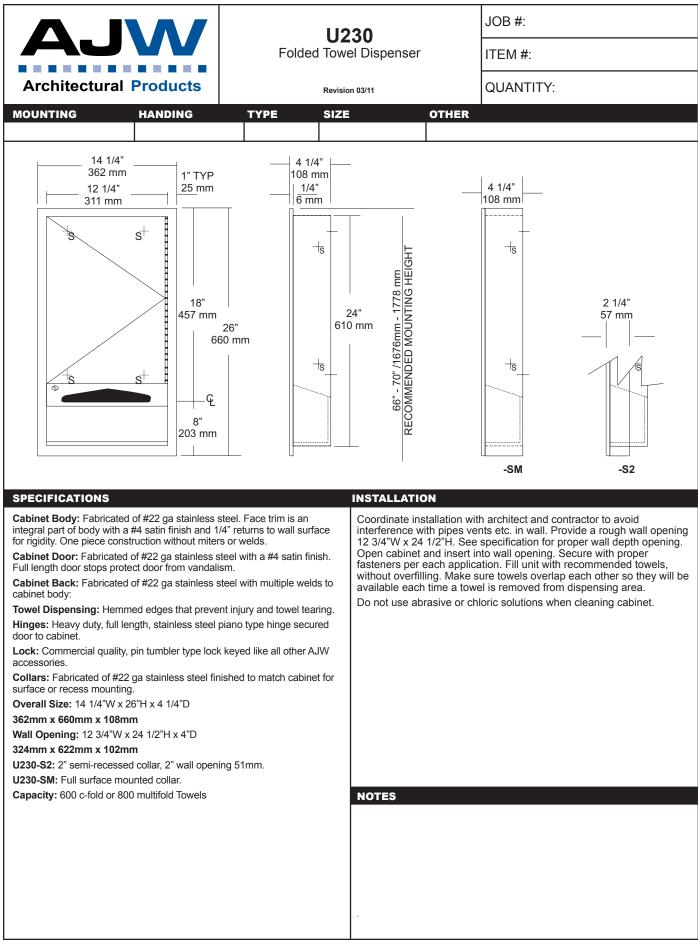

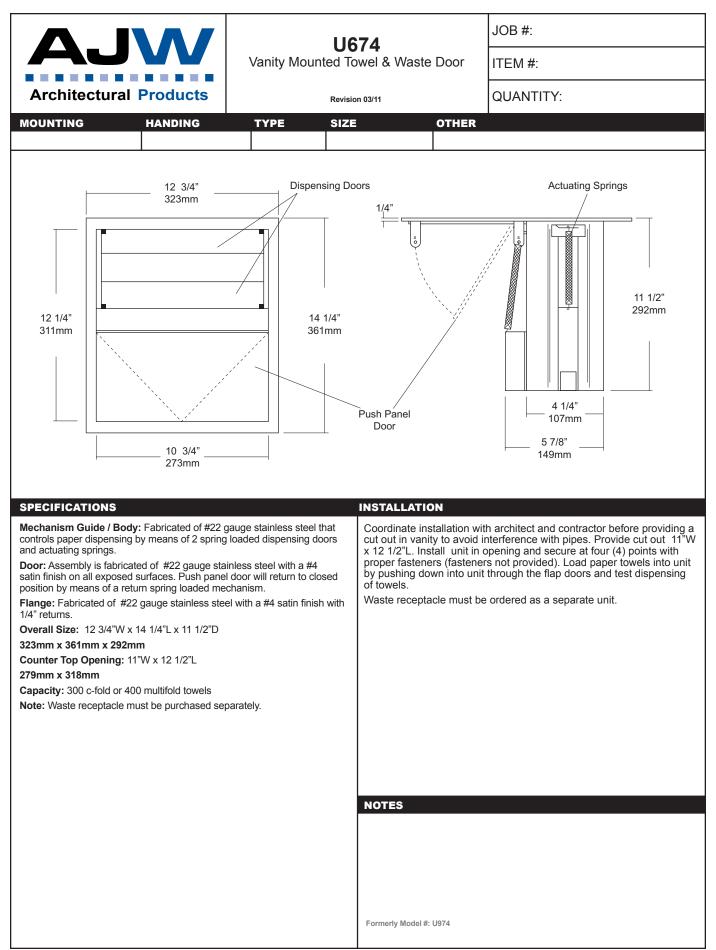

This information is subject to change without formal notice. If you need additional help, AJW has a technical support staff that is ready to assist you by phone: (845) 562-3332, fax: (845)562-3391, email: engineering@ajw.com or visit our website: www.ajw.com. Copyright © 2013 AJW Architectural Products



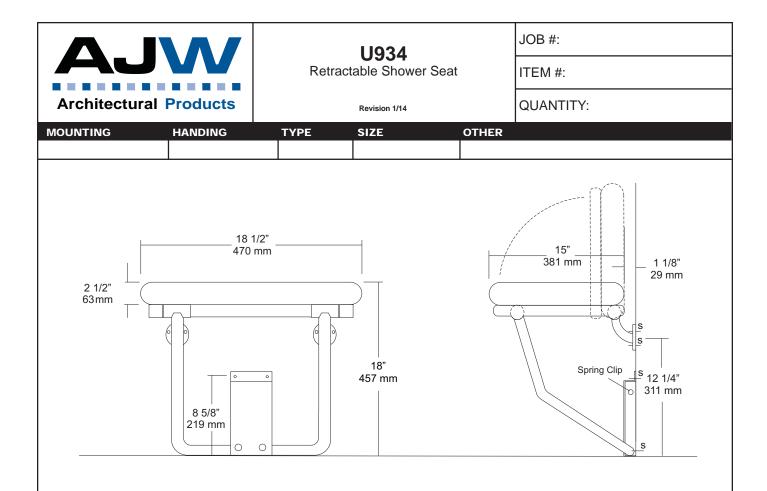

SPECIFICATIONS

Seat: Fabricated of 2 1/2" thick water-resistant reinforced vinyl fabric cushion (white) seamless design with all leading edges having a radius. Seat is secured to a 1/2" thick marine plywood.

Tubing: Fabricated of #18 ga stainless steel with #4 satin finish.

Main Frame: Fabricated of #18 ga 1 1/4" with satin finish tubing. Underside has no exposed fasteners.

Flanges: #18 gauge stainless steel with four (4) countersunk exposed mounting points. Under slung supports have a 1 1/4" OD. (Satin finish)

Mounting Bracket: #14 ga stainless steel "hat" style bracket with 4 mounting support points. Bracket acts as a guide to raise and lower seat platform and is equipped with four (4) points to secure to wall surface. For maximum support, bracket is mounted so the bottom is set on the finished floor surface. Seat will remain in an upright position when not in use by means of a spring clip.

Overall Size: 18 1/2"W x 15"D (seating area)

470mm x 381mm

*Wall to floor mounting design provides equal distribution of weight to ensure safe operation.


INSTALLATION

To comply with ADA Code, seat should be mounted at a height 17" -19" above finished floor. Check all state and local codes for building requirements. Recommend in wall mounting on all shower seats. (BP10) Place seat up against wall making sure the extended part of seat has an offset no more than 1 1/2" away from wall. (Same as grab bar) Transfer mounting points to wall surface and drill pilot holes. Secure seat to surface with proper fasteners per each application. Snugly secure seat to surface and check seat to be level. If seat is level raise and lower seat to check path of travel. Finish securing seat after checking seat for proper operation. When properly mounted seat will support up to 250 lbs and will conform with ADA Code 4.21.3 and 4.26.3

Note: This shower seat is not intended to be installed in applications that have shower bases with rounded corners. AJW recommends the U928 for such applications.


NOTES


Formerly Model #: U934-1A

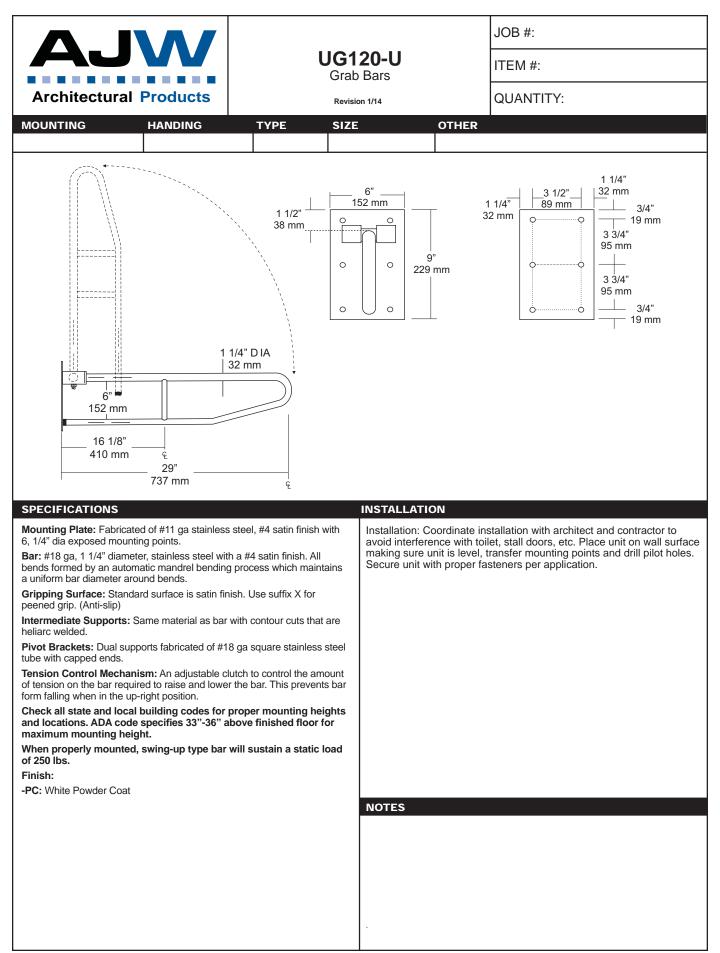





	UX1-V	JOB #:
AJVV	Overhead Support	s ITEM #:
Architectural Products	Architectural Products Revision 03/11	
MOUNTING HANDING	TYPE SIZE	OTHER
SPECIFICATIONS Rod: Fabricated of #18 gauge stainless steel tu Flange: Ceiling mounted exposed flange has a exposed mounting points. Support: Machined aluminum with a satin finish OD shower rod UX1-V: 1"OD	Exposed Mounting (3) Will Accomodate 1" O.D. Rod UNSTALL be with a #4 satin finish. 3" O.D. With three h. Unit will accommodate 1" Exposed Mounting Mounting fasteners end and s to rod to r and secu checks to	D. Flange Verify Ceiling Height To Center Line of Rod et Screw ting Points
	NOTES	

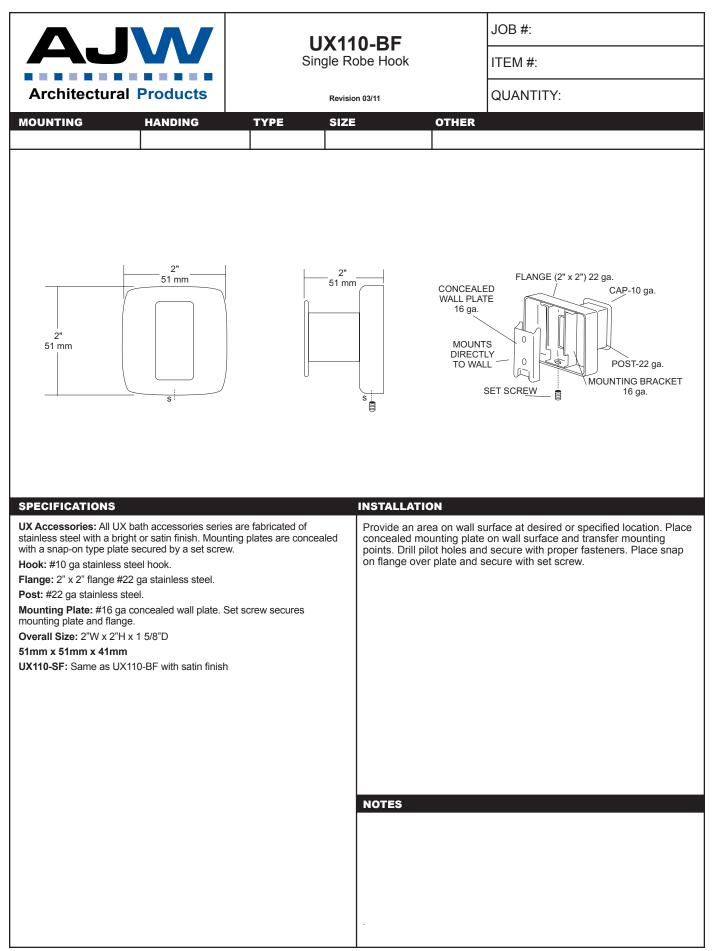

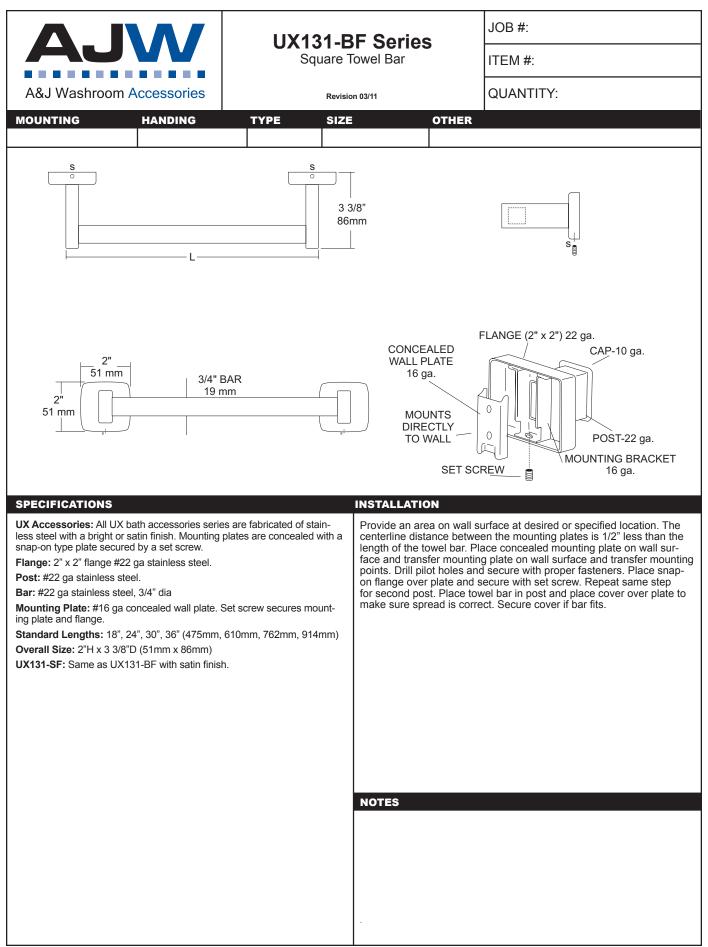

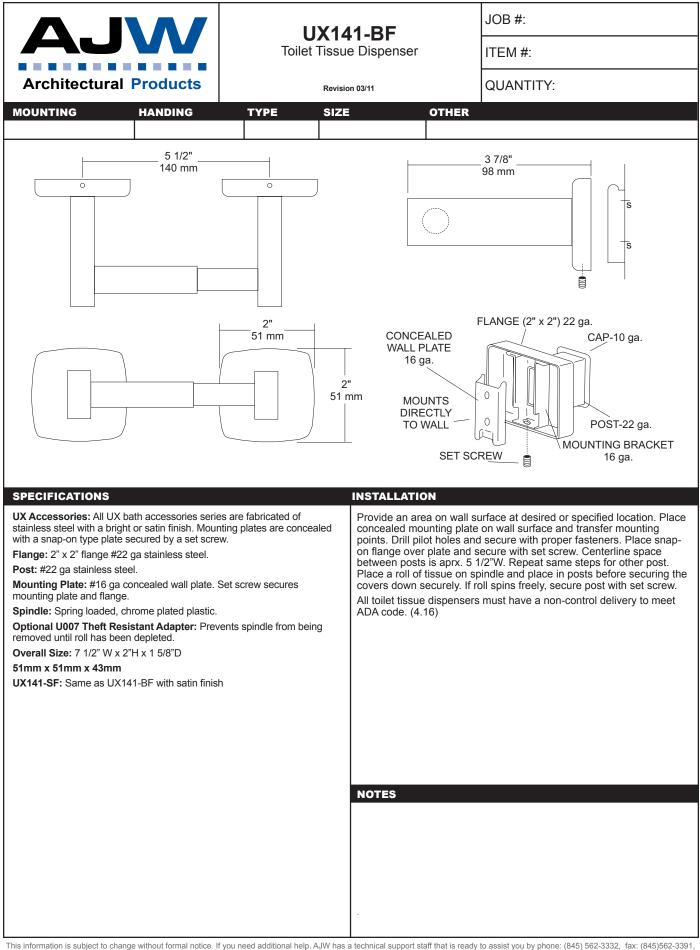

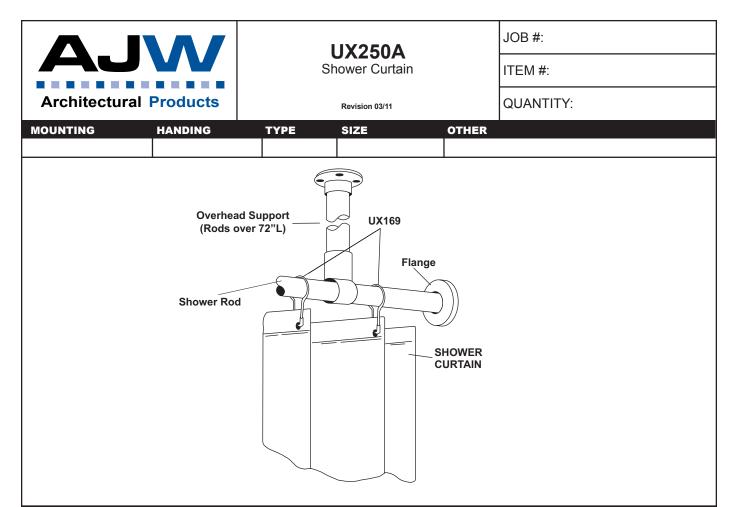

SPECIFICATIONS

U250A: Fully reinforced, wide top hem and reversed bottom hem to prevent water and soap from collecting. Each is equipped with rust proof nickel grommets spaced aprx. 6" on center and down 3/4" from top edge. When determining size of curtain required, consider the desired fullness and add 10" to the shower rod length.

U250A: Anti-Bacterial, flame resistant, self deodorizing fabric. Fabric is non-toxic and contains a patented dual agent antimicrobial system. Provides around the clock effectiveness against cross-infection hazards, reducing growth of viable diseases and odor forming organisms on their surfaces. Curtains are flame resistant and offer permanent protection against the dangers of accidental fires.

Curtain Hooks (UX169): Unit is constructed of stainless steel. Ring snaps around the shower rod to support curtain. Spacing of hooks is every 6" and can be installed on both 1" & 1 1/4" diameter rods.

Colors Available: White, Beige, Medium Blue, Green, Mauve, Frosty, Blush, Claret, Parchment, Yellow & Jade.

*UX1-V/UX2-V: Overhead s/s supports for oversized shower rods. (For shower rods over 72" in length an overhead support is recommended) UX1-V: 1" OD shower rods.

UX2-V: 1 1/4" OD shower rods.

INSTALLATION

Recommended: UX169 stainless steel shower curtain hooks to connect to AJW shower curtain rods. Various types of flanges are available to secure rod and curtain to mounting surface (exposed and concealed).

Measuring Curtains: Curtains are measured W x H. The same curtain will fit a 1 or 1 1/4" diameter rod.

NOTES

Formerly Model #: 250A