date
projectname
attn
from
fax
email

phone

5/24/16 HP295 sarah sarah

sarahk@usdoorways.com



**MOUNTING** 

# **U126**Soap Dispenser

JOB #:

ITEM #:

OTHER

Revision 11/14


SIZE

TYPE

QUANTITY:

	4 3/4 <u>"</u> 121 mm	Wall Plate
Refill Indicator	<u>s</u> +	8 1/4" 210 mm

HANDING

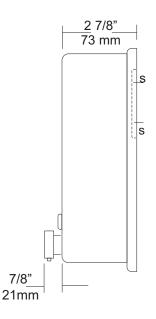

### **SPECIFICATIONS**

Soap Tank: Fabricated of #20 ga stainless steel, #4 satin finish, fully welded one-piece construction.

**Valve:** All purpose antibacterial soap valve cylinder, black molded plastic push style valve that takes less than 5 lbs of force and one hand to operate complies with barrier free guidelines when mounted at proper height.

Viewer: Clear plastic window allows a constant fluid level check.

Concealed Mounting Plate: Fabricated of heavy gauge stainless steel.

**Filler Cap:** Fabricated of stainless steel, hinged to allow easy servicing, secured with special key that creates a vandal resistant dispenser.

Overall Size: 4 3/4"W x 8 1/4"H x 3 3/4"D (wall to valve)

121mm x 210mm x 95mm

Capacity: 40 oz.

Recommend type soaps without chloric solutions for proper operation.

# INSTALLATION

Provide an area on mounting surface at desired or specified location. Secure concealed mounting plate to wall surface with proper fasteners. Slide dispenser down over mounting plate and secure by means of set screw located inside tank. Fill unit with proper soap. Close lid and secure with special key. Test valve for proper operation.

\*It is not recommended to mount any soap dispenser on mirrors

\*\*For best performance, use pre-mixed low concentrate solutions. Dispensers should have periodic maintenance performed to insure the life dispenser. Rinse out globe and valve with warm water to avoid sludge buildup.

Preventative Maintenance: Each dispenser should be flushed out aprx. Every 30 days with warm water to prevent valve from clogging with old soap. Do not use abrasive cleaners to clean dispenser.

## NOTES

1



# **U650**

Folded Towel & Waste Combination Unit

JOB #:
ITEM #:
QUANTITY:

Revision 10/14

MOUNTING	HANDING	TYPE	SIZE	OTHER
, 17 1/4"		1/4"	4 1/4" 108 mm	4 1/4" 108 mm
438 mm 15 1/4 <sup>2</sup> 387 mn	1 TYP.	6 mm	1575 mm) Mounting Height	2 1/4" 57 mm
0	54" 1372 mm		58"-62" (1473 mm -	
is s	584 mm F	extended Removable Vaste 4" 102 mm 8 1 210	.;\$\\	-SM -S2

### **SPECIFICATIONS**

**Body:** Fabricated of #22 ga stainless steel with a #4 satin finish.

**Flange:** Fabricated of #22 ga stainless steel finished to match cabinet with 1/4" returns. (No miters or welds)

Cabinet Back: Fabricated of stainless steel formed for rigidity with multiple welds to cabinet body.

**Cabinet Door:** Fabricated of #22 ga stainless steel with #4 satin finish.

**Towel Dispenser:** Fabricated of #22 ga stainless steel with hemmed edges to prevent injury and towel tearing.

**Removable Waste:** Fabricated of #22 ga stainless steel #4 satin finish with all leading edges to have a radius. Unit is secured in place by a bottom bracket guide and top lock.

Hinge: Full length, heavy duty, stainless steel piano type hinge.

**Locks:** Pin tumbler commercial quality, keyed like all other AJW cabinets. **Collars:** Fabricated of #22 ga stainless steel, finished to match cabinet.

(Used when full recessing cannot be accomplished)

Overall Size: 17 1/4"W x 54"H x 8 1/4"D

438mm x 1372mm x 210mm

Wall Opening: 15 3/4"W x 52 1/2"H x 4"D

400mm x 1334mm x 102mm

U650-S2: semi-recessed. with 2" collar, 2" wall opening 51mm

U650-SM: Full surface mounted collar.

Towel Capacity: 600 c-fold or 800 multifold

Waste Capacity: 12 gallons (1.6 cu ft)

Options : -VL1: Vinyl Liner

#### INSTALLATION

Coordinate installation with architect and contractor to avoid interference with pipes, vents, etc. Provide a rough wall opening 15 3/4"W x 52 1/2"H. See chart for required wall depth. If collar is required, slide collar over the back before installing into wall. Remove waste from cabinet and mount unit plumb and true in opening with proper fasteners per application. Secure waste in cabinet and load paper towels.

When cleaning cabinet use a non abrasive non-chloric solution and wiped off with the grain of the cabinet.



# UX112-BF

Double Robe Hook

JOB #:
ITEM #:
QUANTITY:

Revision 12/11

MOUNTING	HANDING	TYPE	SIZE	OTHER
	4" 102 mm			1 5/8" 41 mm
2" 51 mm	2" 51 mm		CONCEALE WALL PLAT 16 ga. MOUNT: DIRECTL TO WAL	FLANGE (2" x 2") 22 ga. CAP-10 ga.

### **SPECIFICATIONS**

**UX Accessories:** All UX bath accessories series are fabricated of stainless steel with a bright or satin finish. Mounting plates are concealed with a snap-on type plate secured by a set screw.

Hook: #10 ga stainless steel hook

Flange: 2" x 2" flange #22 ga stainless steel.

Post: #22 ga stainless steel.

51mm x 51mm x 41mm

Mounting Plate: #16 ga stainless steel concealed wall plate. Set screw

secures mounting plate and flange. **Overall Size:** 4"W x 2"H x 1 5/8"D

UX112-SF: Same as UX112-BF with satin finish.

### **INSTALLATION**

Provide an area on wall surface at desired or specified location. Place concealed mounting plate on wall surface and transfer mounting points. Drill pilot holes and secure with proper fasteners. Place snap on flange over plate and secure with set screw.



# **UX132-BF Series**

**Round Towel Bar** 

JOB #:	
ITEM #:	
QUANTITY:	

Revision 03/11

MOUNTING	HANDING	ТҮРЕ	SIZE	OTHER
S O		\$ °	3 3/8" 86mm	
2" 51 mm 2" 51 mm	3/4" BAF   19 mm	3	s;	FLANGE (2" x 2") 22 ga.  CONCEALED WALL PLATE 16 ga.  MOUNTS DIRECTLY TO WALL  SET SCREW  FLANGE (2" x 2") 22 ga.  CAP-10 ga.  MOUNTING BRACKET 16 ga.

### SPECIFICATIONS

**UX Accessories:** All UX bath accessories series are fabricated of stainless steel with a bright or satin finish. Mounting plates are concealed with a snap-on type plate secured by a set screw.

Flange: 2" x 2" flange #22 ga stainless steel.

**Post:** #22 ga stainless steel. **Bar:** #22 ga stainless steel, 3/4" dia

Mounting Plate: #16 ga concealed wall plate. Set screw secures mount-

ing plate and flange.

Overall Size: 2"H x 3 3/8"D (51mm x 86mm)

Standard Lengths: 18", 24", 30", 36" (475mm, 610mm, 762mm, 914mm)

**UX132-SF:** Same as UX132-BF with satin finish.

# INSTALLATION

Provide an area on wall surface at desired or specified location. The centerline distance between the mounting plates is 1/2" less than the length of the towel bar. Place concealed mounting plate on wall surface and transfer mounting plate on wall surface and transfer mounting points. Drill pilot holes and secure with proper fasteners. Place snapon flange over plate and secure with set screw. Repeat same step for second post. Place towel bar in post and place cover over plate to make sure spread is correct. Secure cover if bar fits.




# **UX169**Shower Curtain Hooks

JOB #:
ITEM #:
QUANTITY:

Revision 03/11

MOUNTING	HANDING	TYPE	SIZE	OTHER

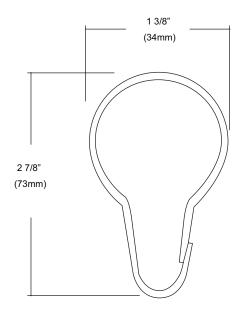

### SPECIFICATIONS INSTALLATION

Unit is constructed of stainless steel. Ring snaps around the shower rod to support curtain. Spacing of hooks is every 6" and can be installed on both 1" & 1 1/4" diameter rods.

Overall Size: 1 3/8"W x 2 7/8

34mm x 73mm

Thread hook through curtain eyelet. Slide rings onto curtain rod. Hook can accommodate 1" &~1~1/4" rods.




# UX76-BF


Toilet Tissue Dispenser

JOB #:	
ITEM #:	
OLIANTITY:	

Revision 10/14

MOUNTING	HANDING	TYPE	SIZE	OTHER

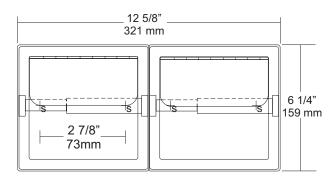

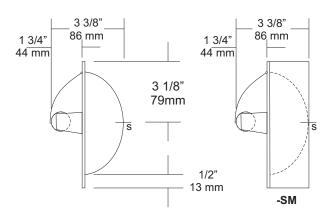

### **SPECIFICATIONS**

**Shell and Flange:** Drawn one piece construction fabricated of #22 ga stainless steel with a bright finish. Two mounting points allow unit to be secured to mounting clamps or framing in wall opening.

**Hood:** Fabricated of bright stainless steel, secured to shell by a welded hinge.

Support Posts: Heavy duty cast Zamac with bright chrome finish to match

shell

**Spindle:** Spring loaded, chrome plated plastic roller. **Collars:** #22 ga stainless steel finished to match unit.

Overall Size: 12 5/8"W x 6 1/4"H x 3 3/8"D

321mm x 159mm x 86mm

Wall Opening: 11 3/4"W x 5 1/4"H x 2"D

298mm x 133mm x 51mm

UX76-BF-SM: Surface Mounted Dual Roll Dispenser with hood.

UX76-SF: Same as UX76-BF with satin finish.

**UX76-SF-SM:** Same as UX76-BF-SM with satin finish.

Optional U007 Theft Resistant Adapter: Prevents spindle from being

removed until roll has been depleted.

### INSTALLATION

Provide a wall opening at desired or specified area and coordinate with architect or contractor to avoid interference with pipes, vents etc. In wall. See specification for proper wall openings. Secure unit in wall opening with proper fasteners and clamps per application. Insert roller into roll core depress one side and install on posts.

Toilet Paper Dispensers: All dispensers that are to meet ADA code cannot have any type of controlled delivery. (4.16)

Mounting Clamps:

B-1 Clamp: Same as B-Clamp for UX76.

Note: Mounting Clamps are optional and must be ordered separately.